

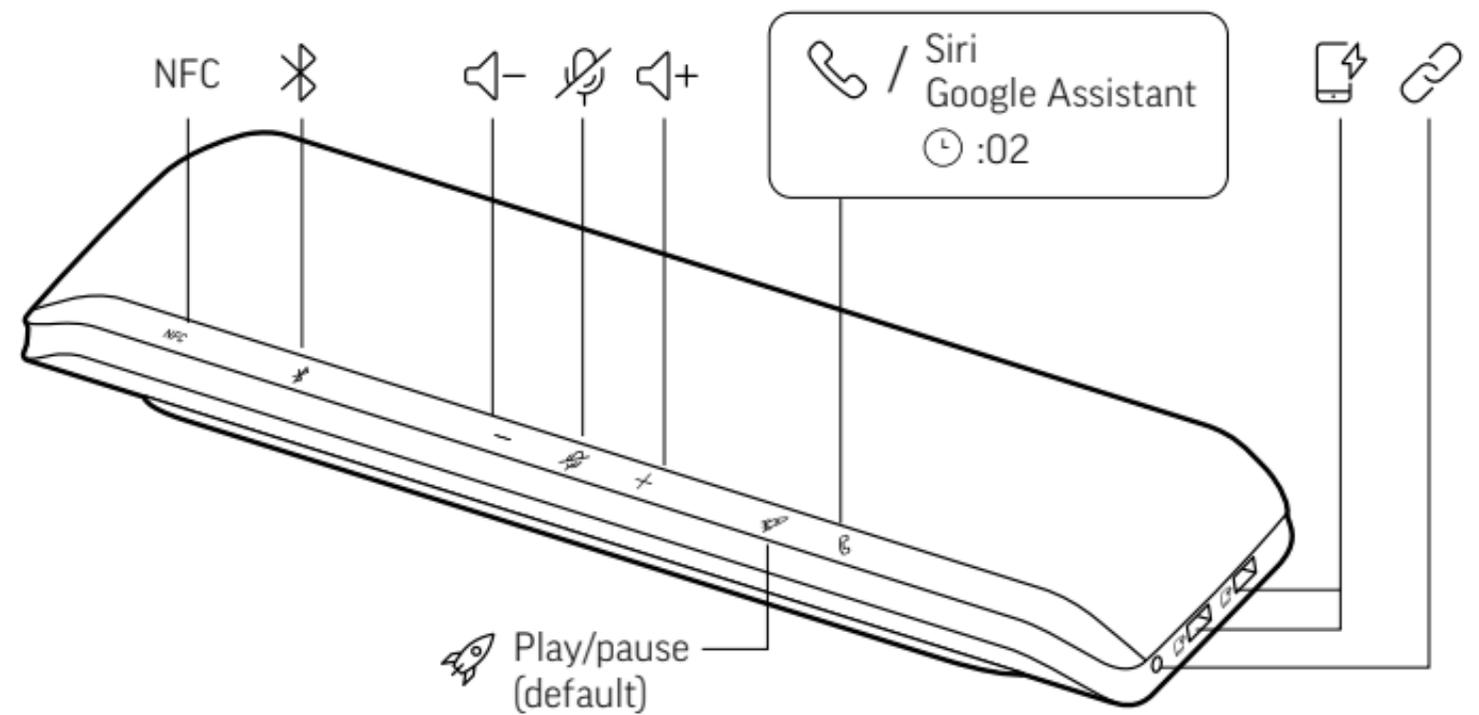



## POWER AND CONNECT

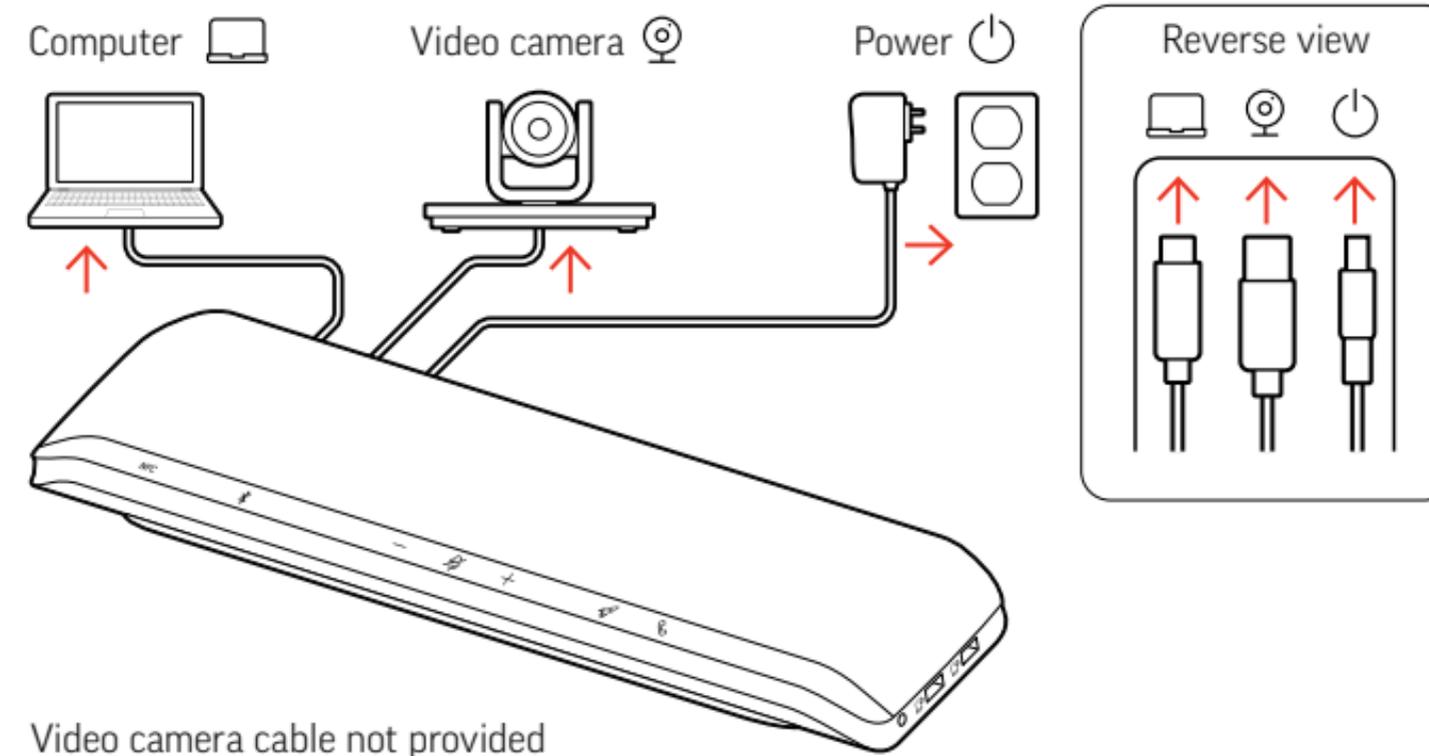

## CORDED SETUP

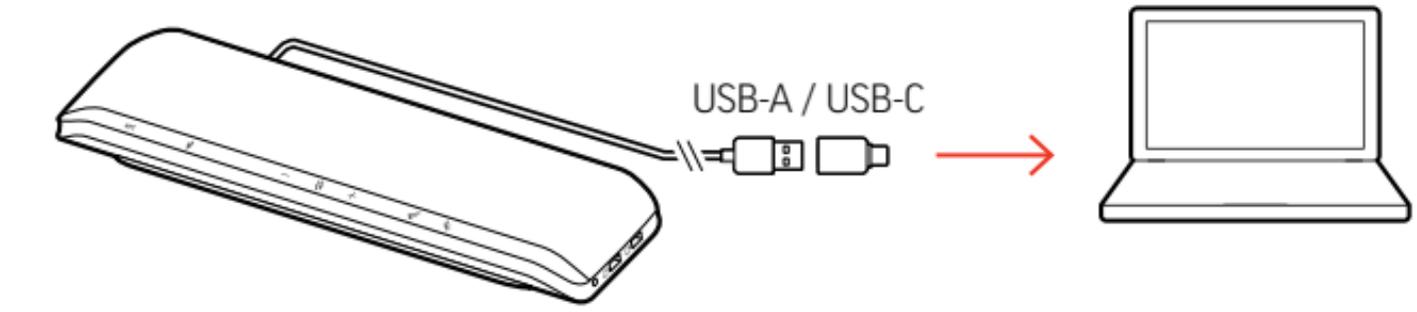


## MOBILE SETUP (PAIR)

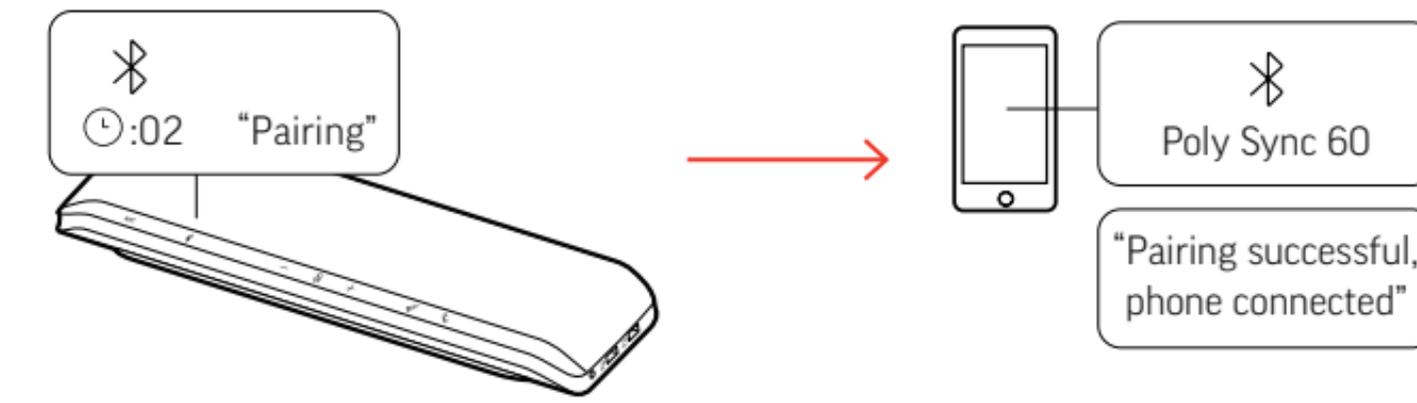

## CHARGE YOUR PHONE


With your speakerphone powered on, charge up to two phones.  
Connection provides power only.

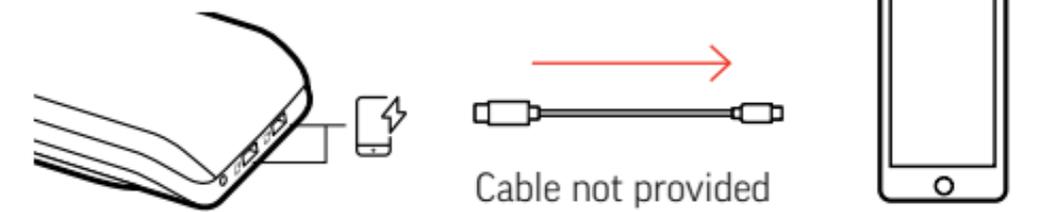

## CUSTOMIZE YOUR SPEAKERPHONE

Configure your Rocket button feature in Poly Lens desktop app.  
Choose from play/pause music (default), device status check and more.

↓ [poly.com/lens](https://poly.com/lens)

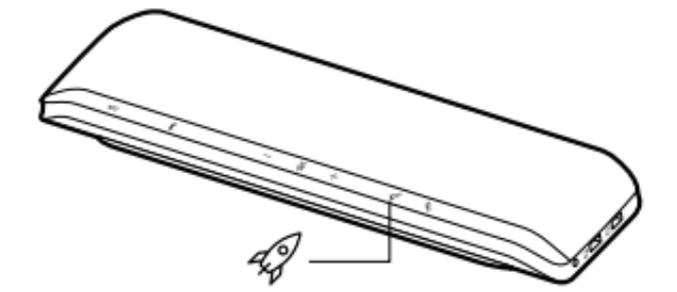

## DOWNLOAD SOFTWARE

Download Poly Lens to get the most out of your speakerphone.

- Enable features
- Change settings
- Update software
- View user guides

↓ [poly.com/lens](https://poly.com/lens)

© 2021 Plantronics, Inc. All rights reserved. Poly, the propeller design, and the Poly logo are trademarks of Plantronics, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. and any use by Plantronics, Inc. is under license. All other trademarks are the property of their respective owners. Manufactured by Plantronics, Inc.

215633-05 01.21 Model ID: SY60/SY60-M




Recyclable where facilities exist

## LINK SPEAKERPHONES


To wirelessly connect two Sync 60, press Link  button on both speakerphones for 2 seconds. You hear “connection successful” when linked. Pair one speakerphone to your idle mobile device to make calls or play media.

**Note:** Ensure your speakerphone USB cable is not connected to a computer.

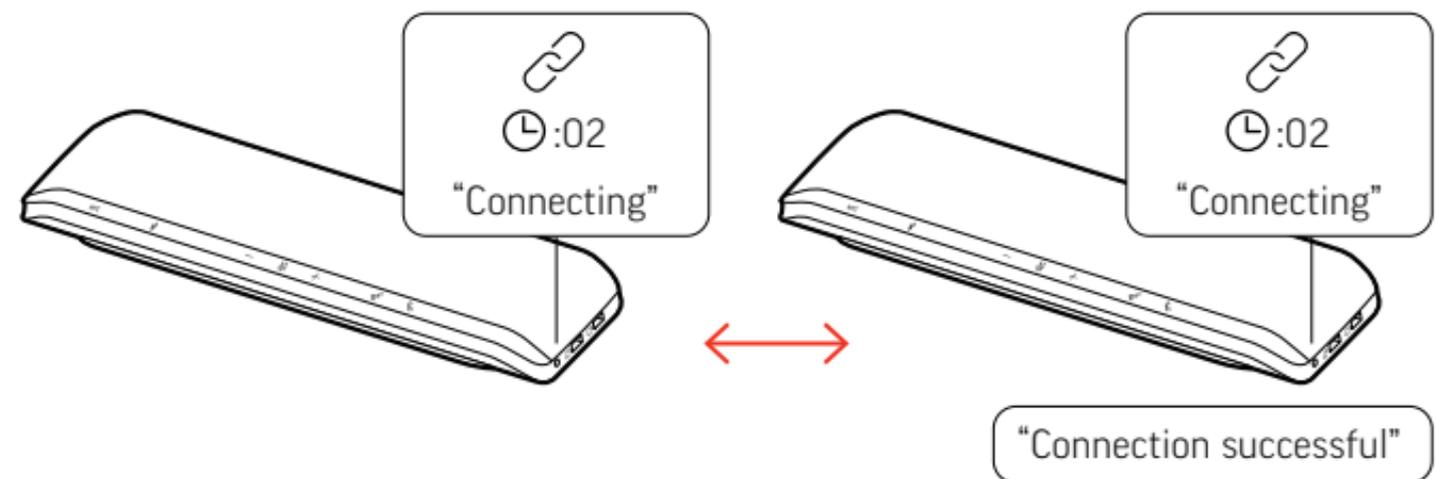

## ACCESS VIDEO CAMERA PORT

Your speakerphone ships with the video camera  port covered. Access the port by removing the cover with the provided tool.

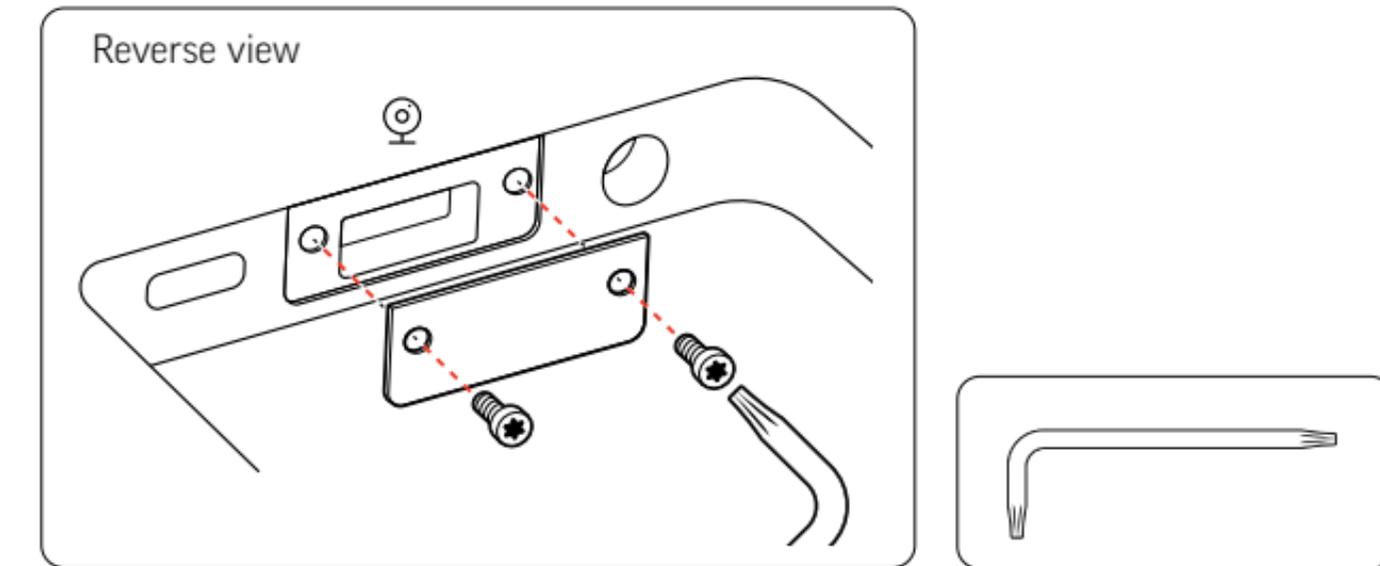

# QUICK START

## POLY SYNC 60 SERIES