




Panasonic KX DT543 & KX DT546 Headset Programming

If you do not have a headset button pre programmed you will need to program one of the flexible CO buttons. Seen in below diagram (3)

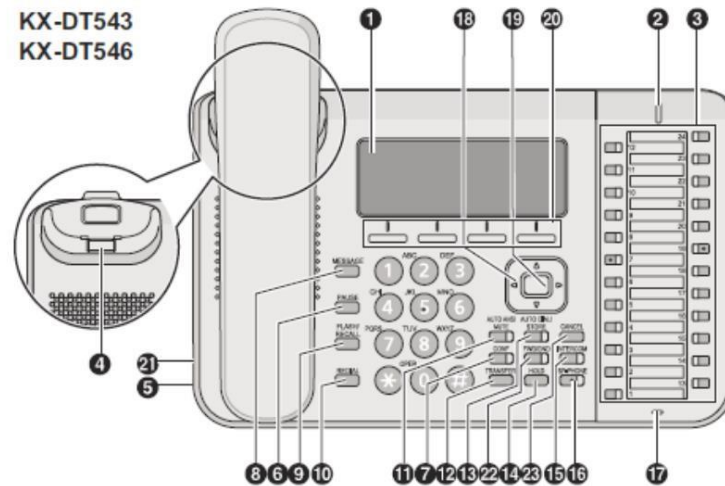

PROGRAMMING CO KEYS

To program a CO key / DSS key for various functions:

- Do not lift the handset
- Press the **PROGRAM** key
- Press the key to be programmed (**Important! DO NOT** use preprogrammed outside line keys)
- Use the up and down arrows of the navigator key to display the operation you wish the key to perform
- Follow the prompts as required
- Press the **EXIT** key to exit

If you already have a headset key programmed on the phone use the below steps to use your headset

HEADSET OPERATION

To enable and disable the headset mode of operation:

- While not on a call but in headset mode, press the lit preprogrammed **DSS key*** programmed as **HEADSET**
- This will turn off the light, disabling the headset mode and bring function back to the handset and speakerphone.

When you wish to return to headset mode, press the preprogrammed **DSS key*** programmed as **HEADSET** and the light will come on again

Tried everything and still not working? Call

Our Friendly Experts

1300 889 728

