


# EPOS

ADAPT 400 Series

## Battery Removal Guide

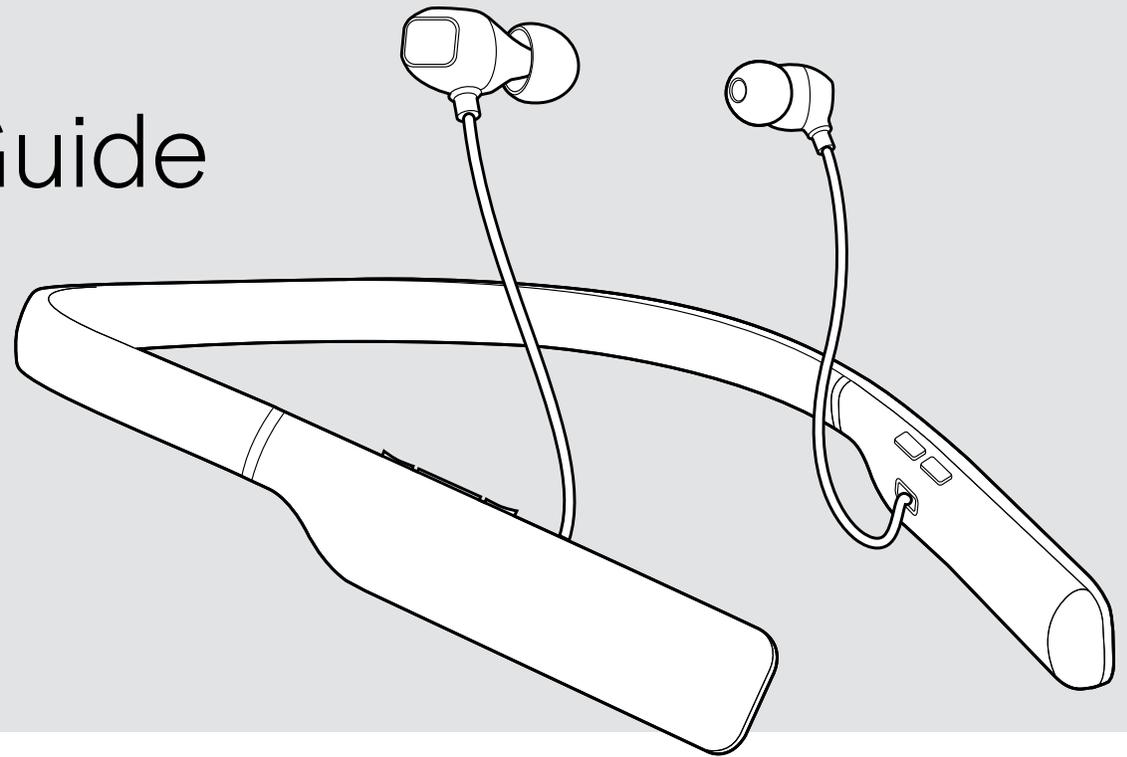




DSEA A/S

Kongebakken 9, DK-2765 Smørum, Denmark  
[www.eposaudio.com](http://www.eposaudio.com)

Publ. 04/22, A02



THE POWER OF AUDIO

# Battery Removal Guide

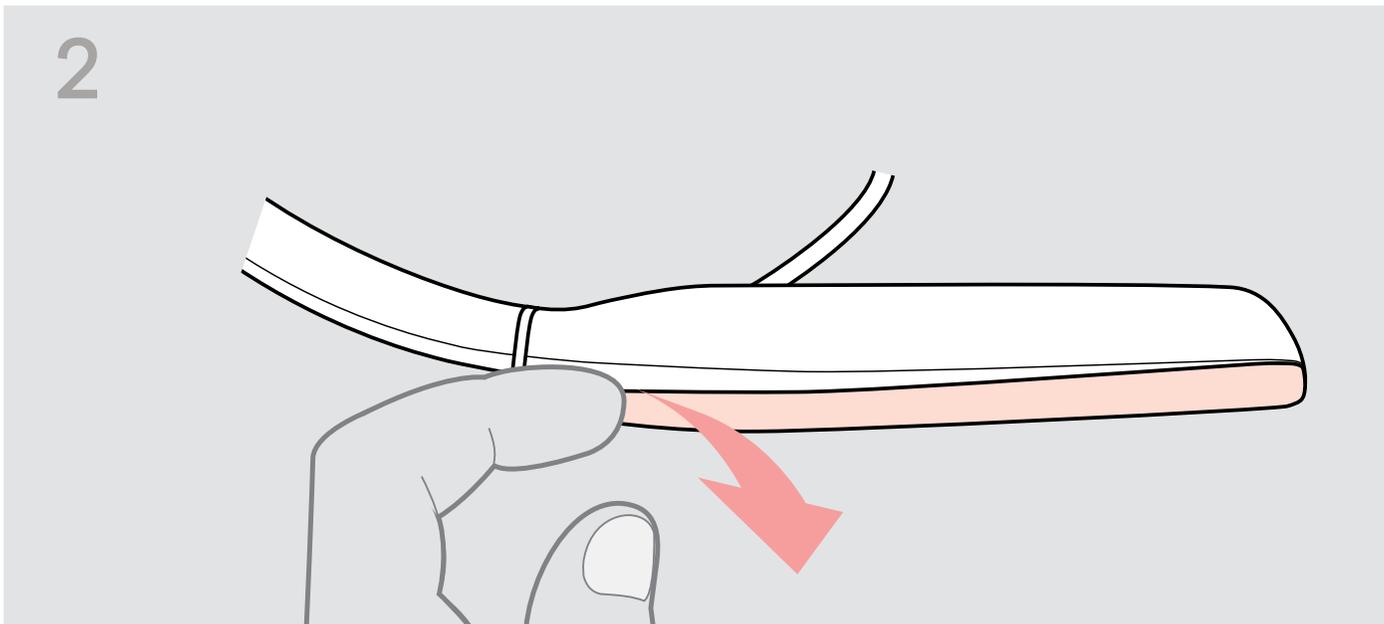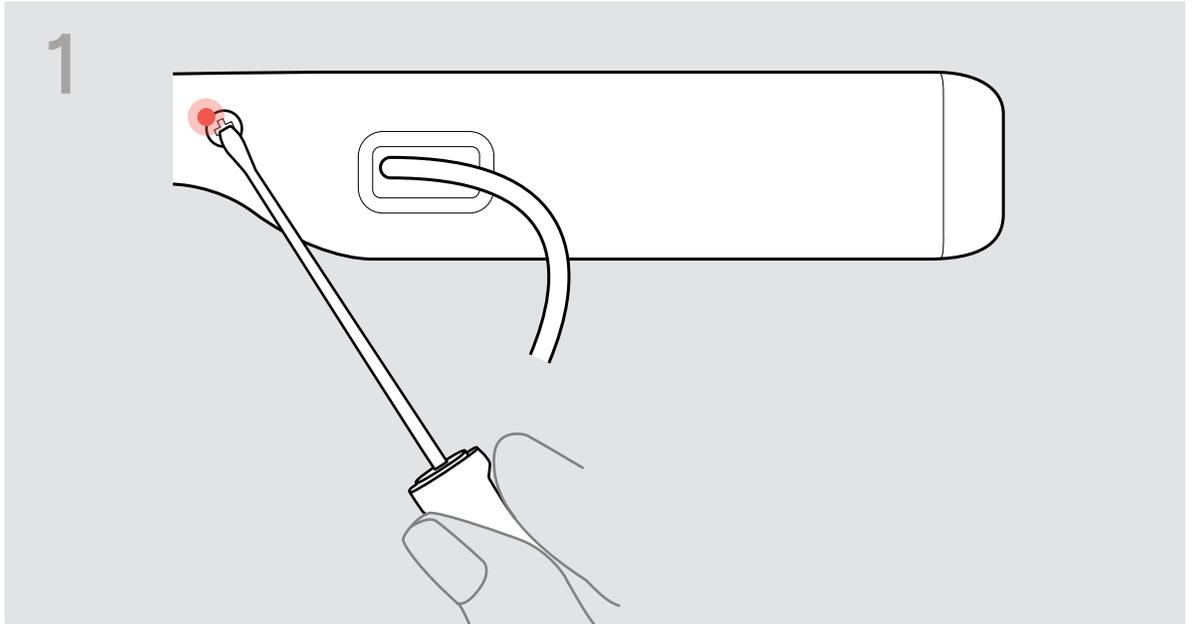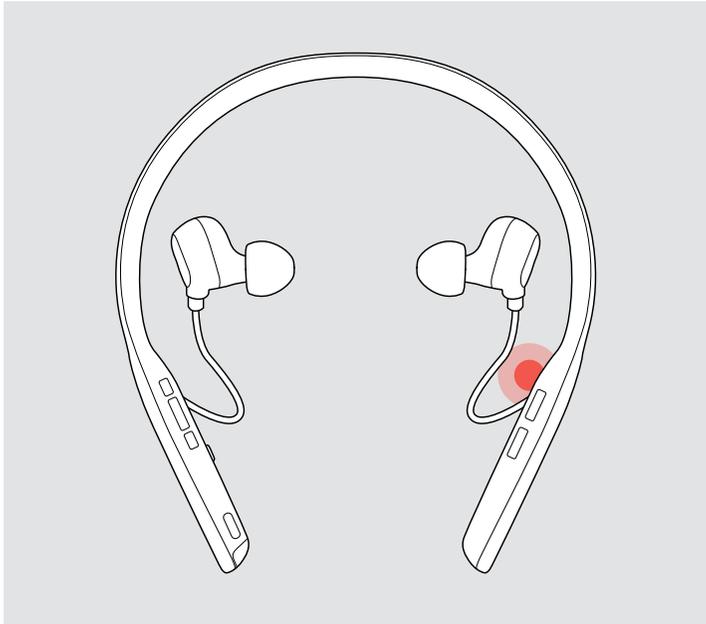

1. Remove the screw with a screwdriver
2. Lift the cover on the neckband side.

# Battery Removal Guide

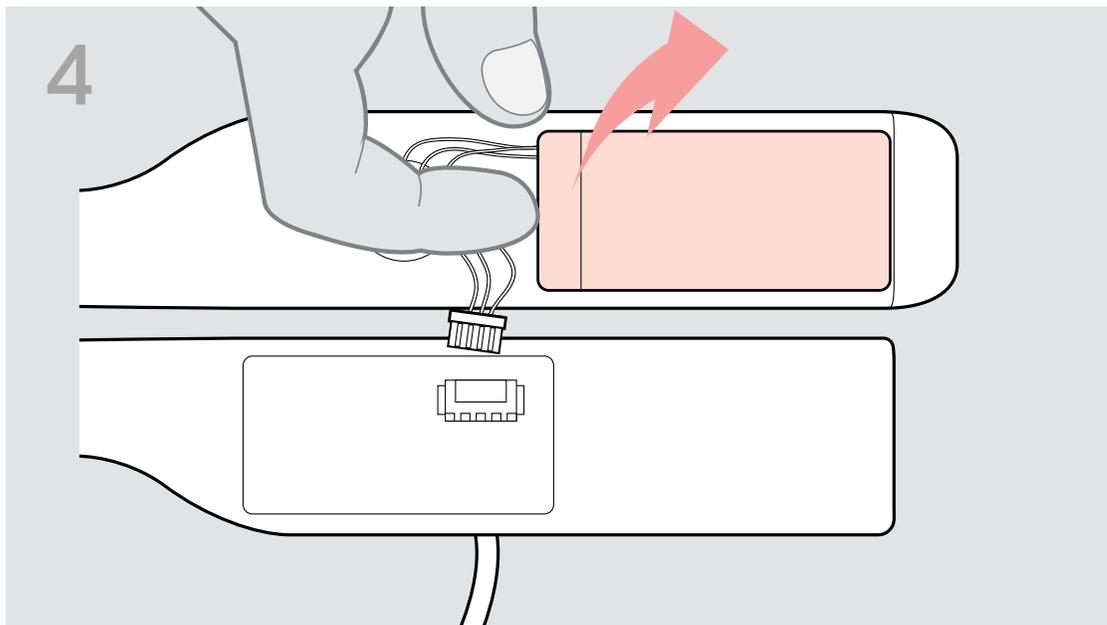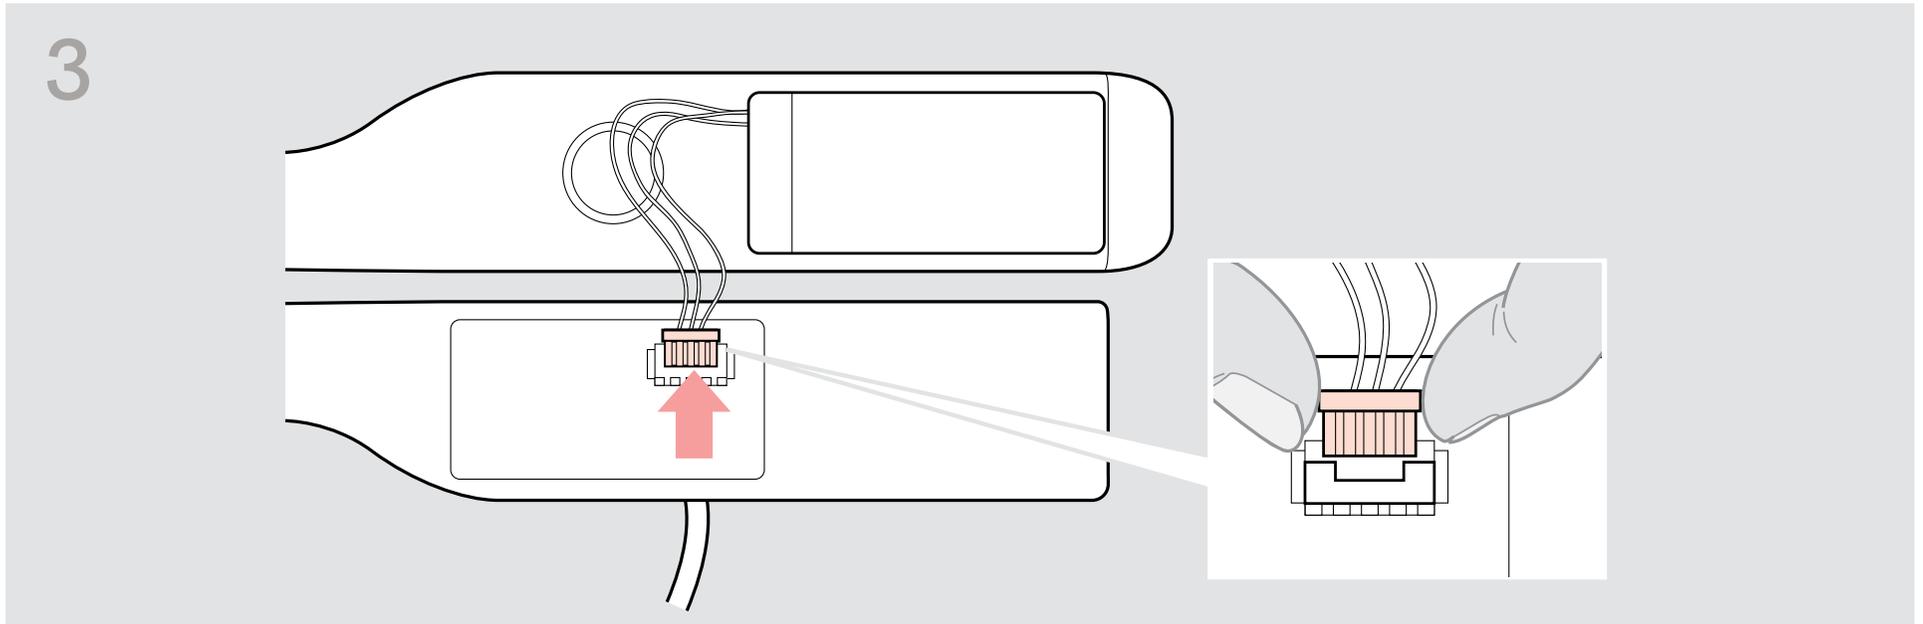

3. Unplug the connector of the rechargeable battery.
4. Lift the battery at the connector side and remove the rechargeable battery.