





PanaCast 50

Screen Mount

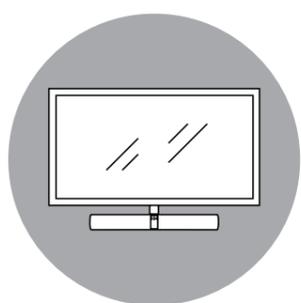


Install below screen

Start from page 1 →

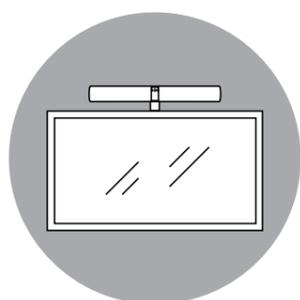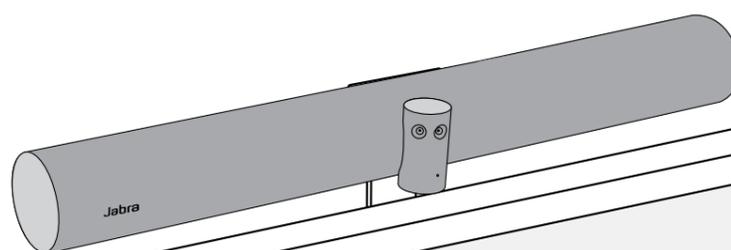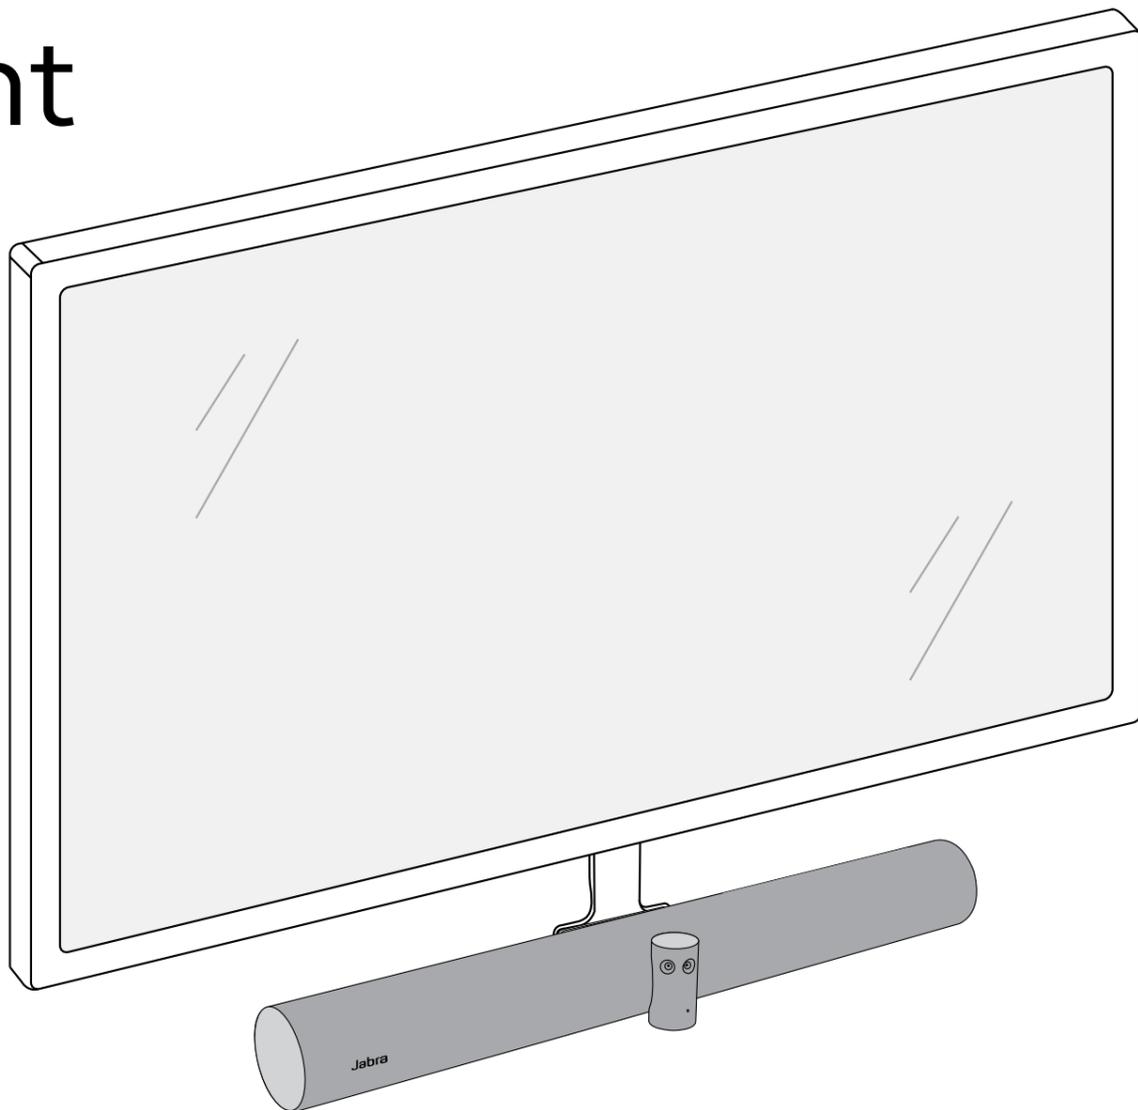


Install above screen


Start from page 7 →

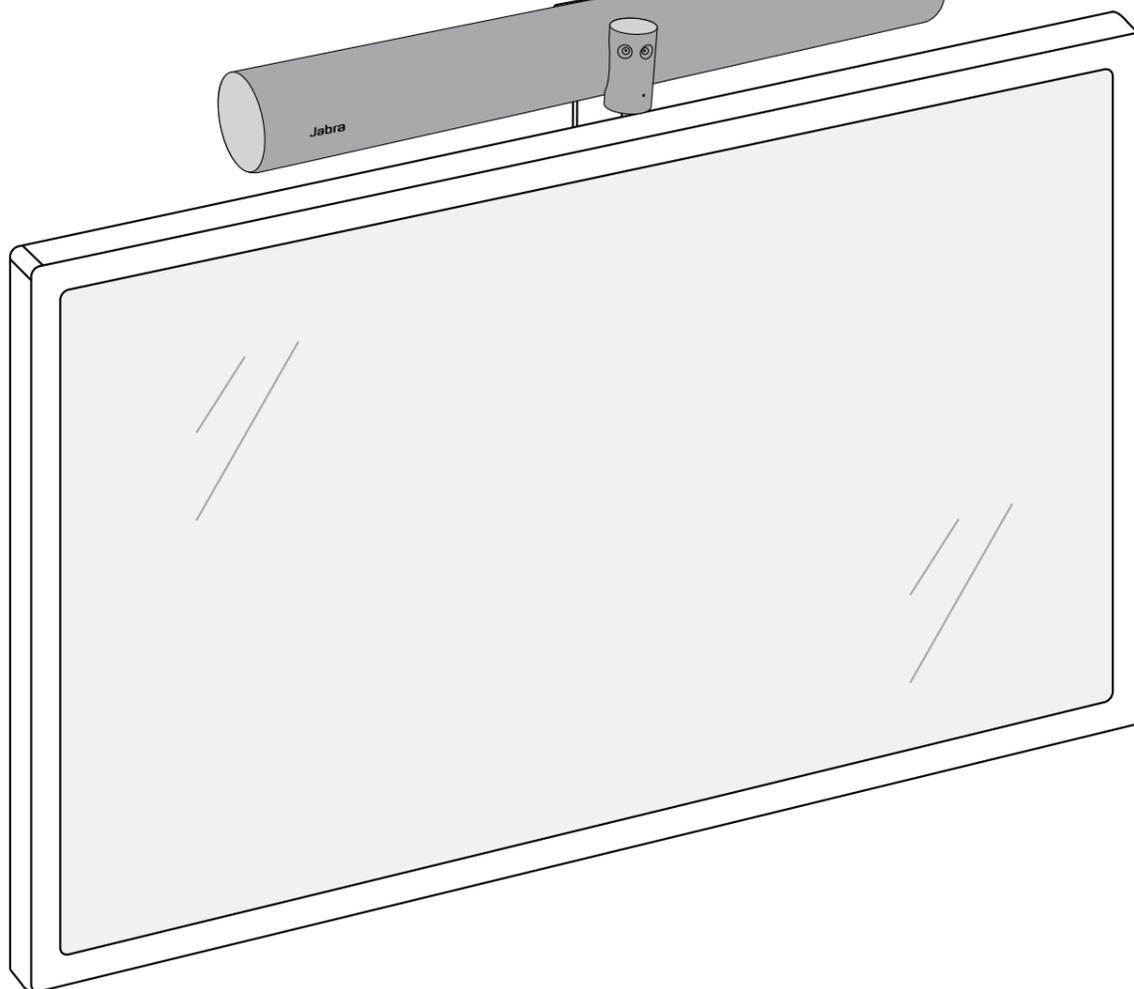

Screen Mount horizontal section

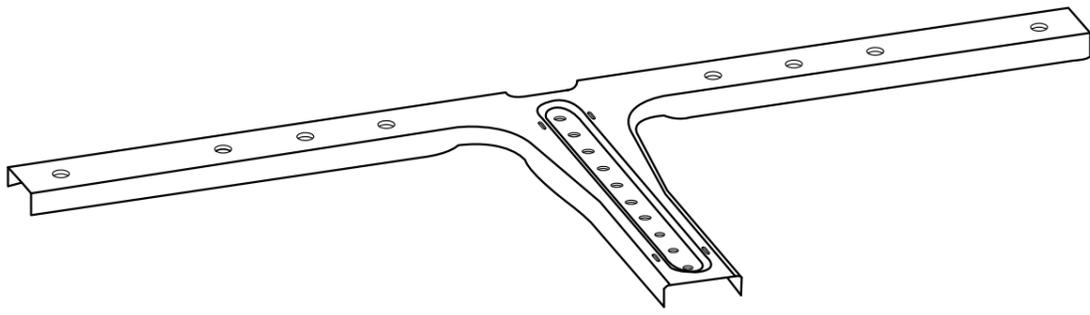


Screen Mount vertical section

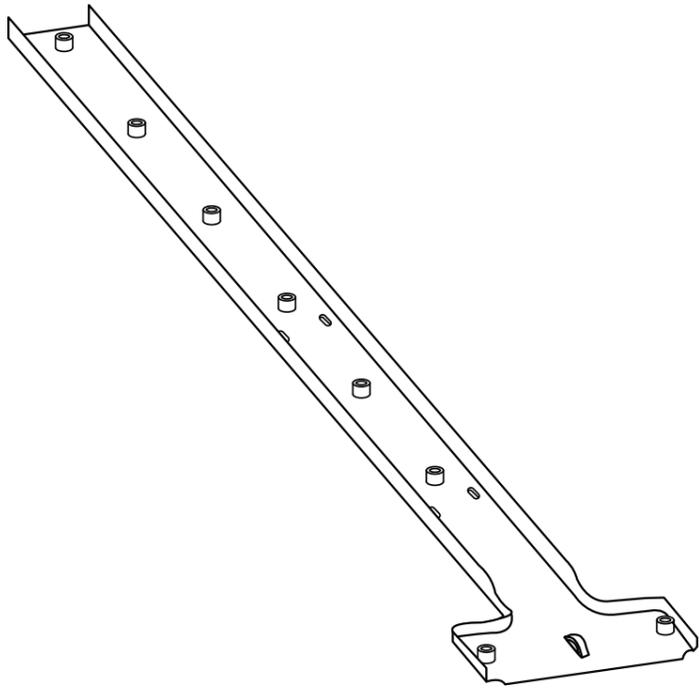


Screws




M6x30
(4 pcs)




M6x40
(4 pcs)




M6x50
(4 pcs)

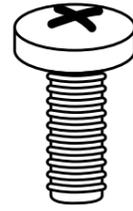

M8x30
(4 pcs)

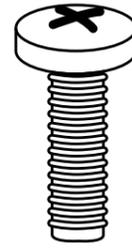

M8x40
(4 pcs)

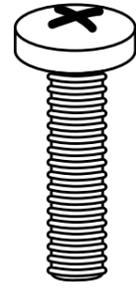

M8x50
(4 pcs)



M5x8
(2 pcs)



M5x12
(2 pcs)

Spacers




2 mm
(2 pcs)



5 mm
(4 pcs)



12 mm
(2 pcs)



22 mm
(4 pcs)



32 mm
(4 pcs)

Washers



M6
(4 pcs)




M8
(4 pcs)

Protective pads




(2 pcs)

Tools needed (not supplied in the pack)

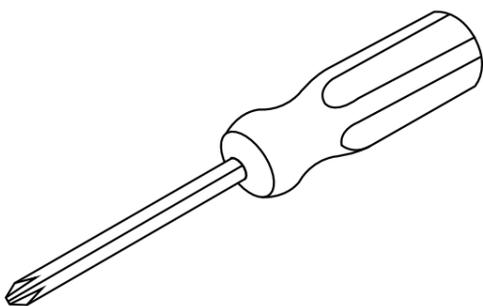



Phillips head screwdriver

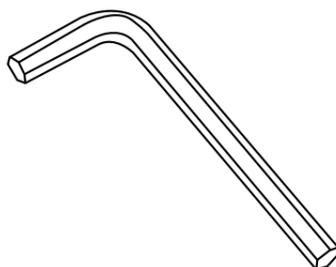

4 mm hex key


1

If the screen is already wall-mounted, remove it from the wall.

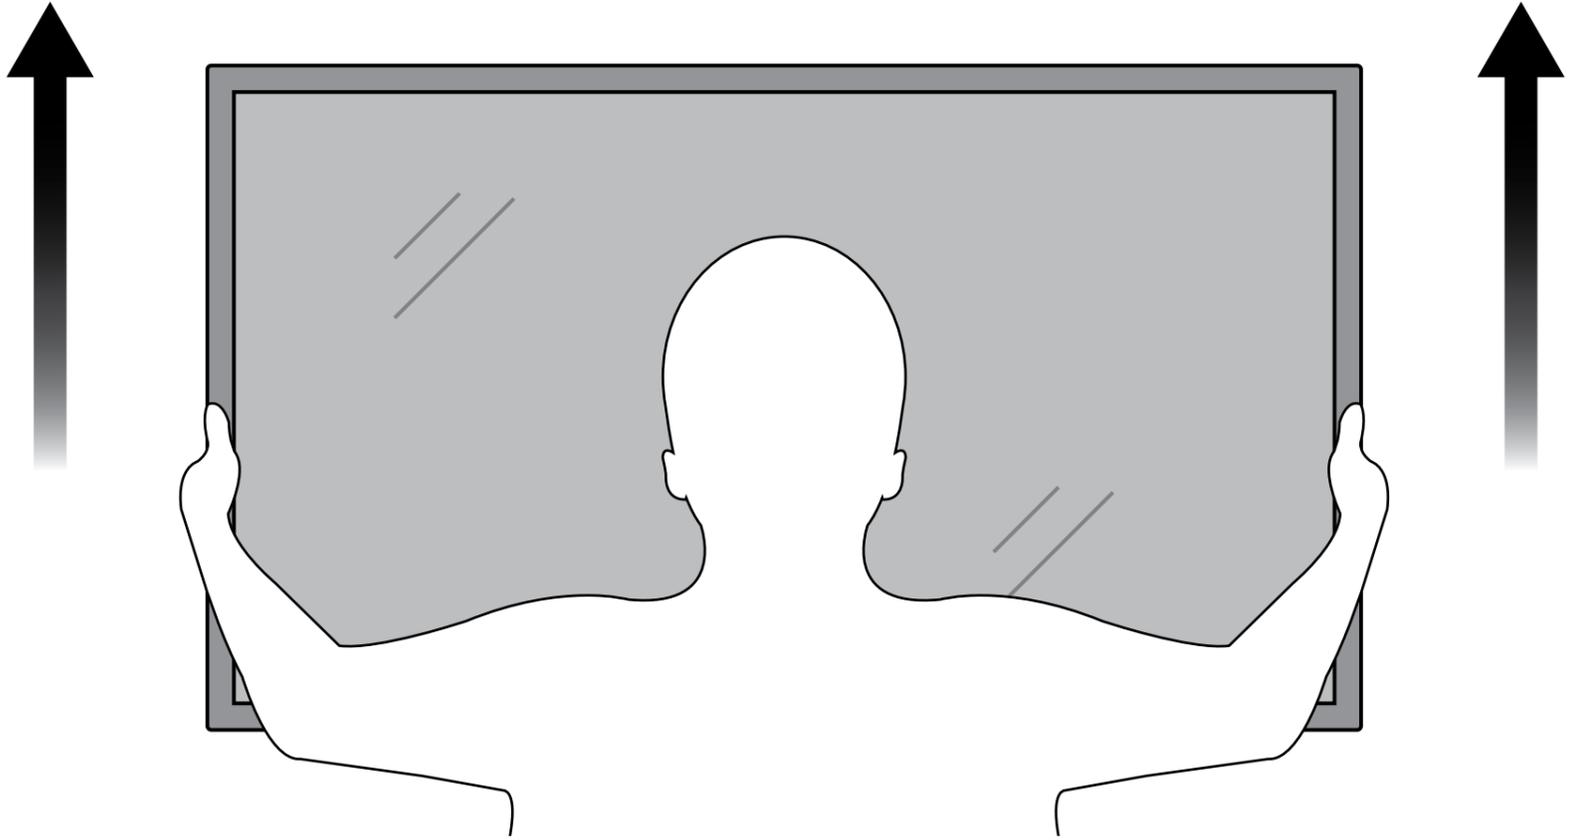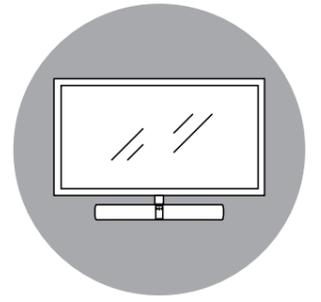



2

Detach the existing **VESA mount** from your screen.

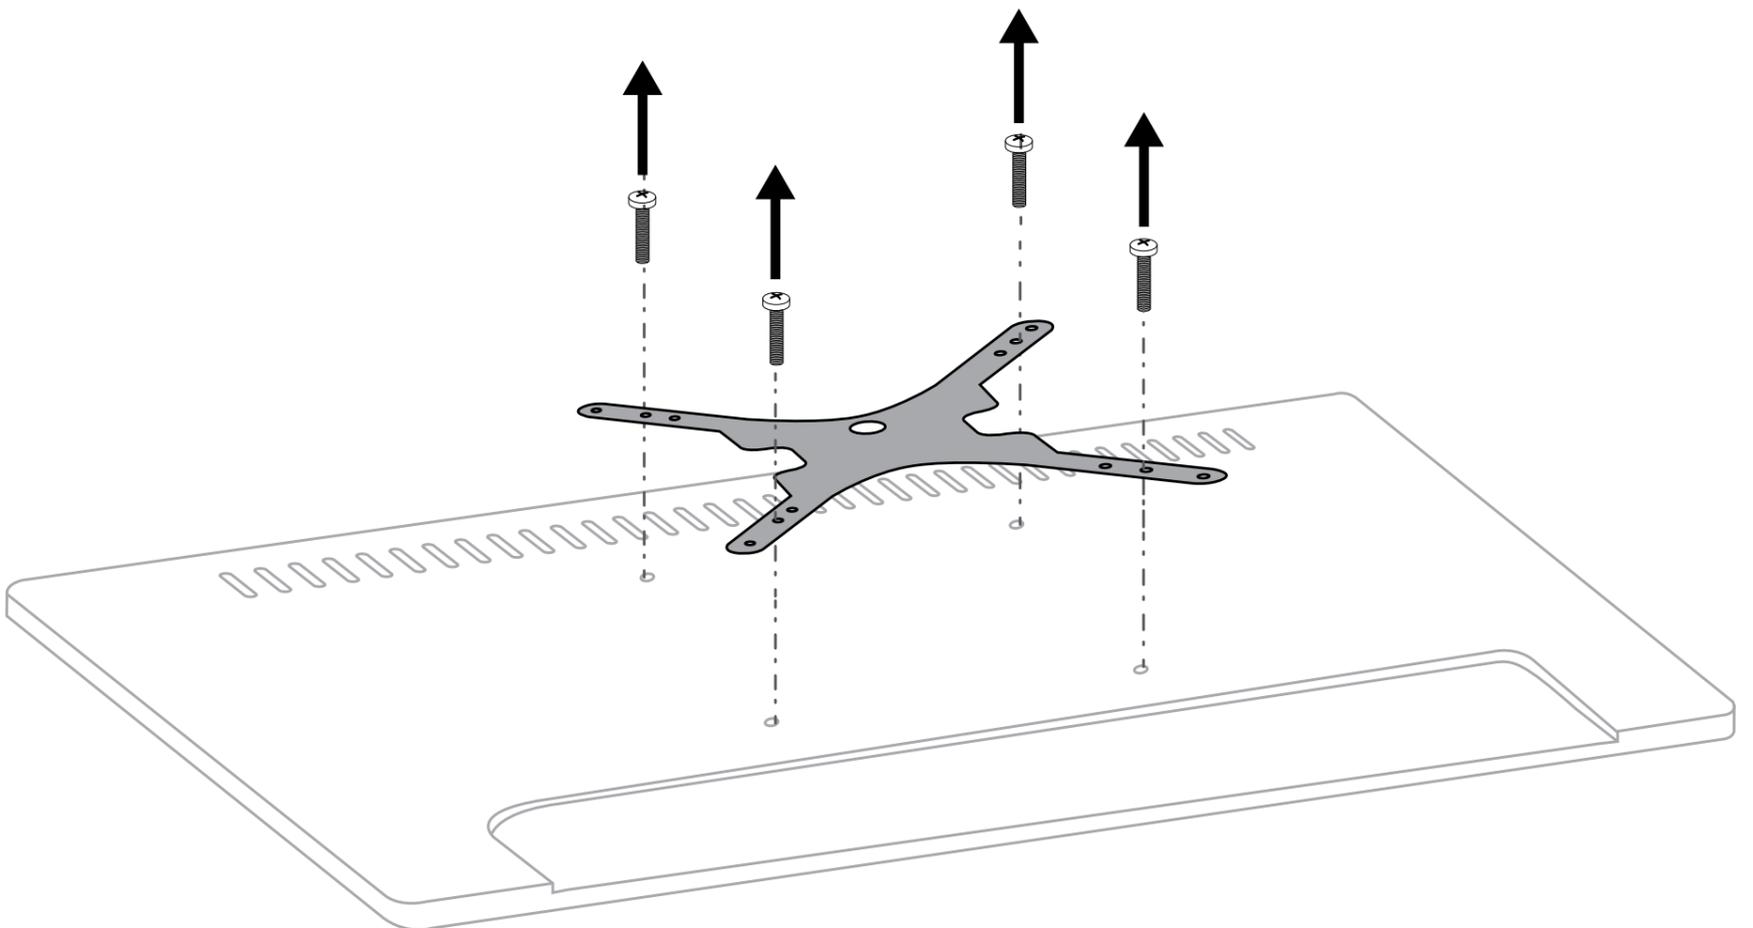



3

Measure the distance between the VESA mount hole and the bottom of the screen. This distance is **X**.

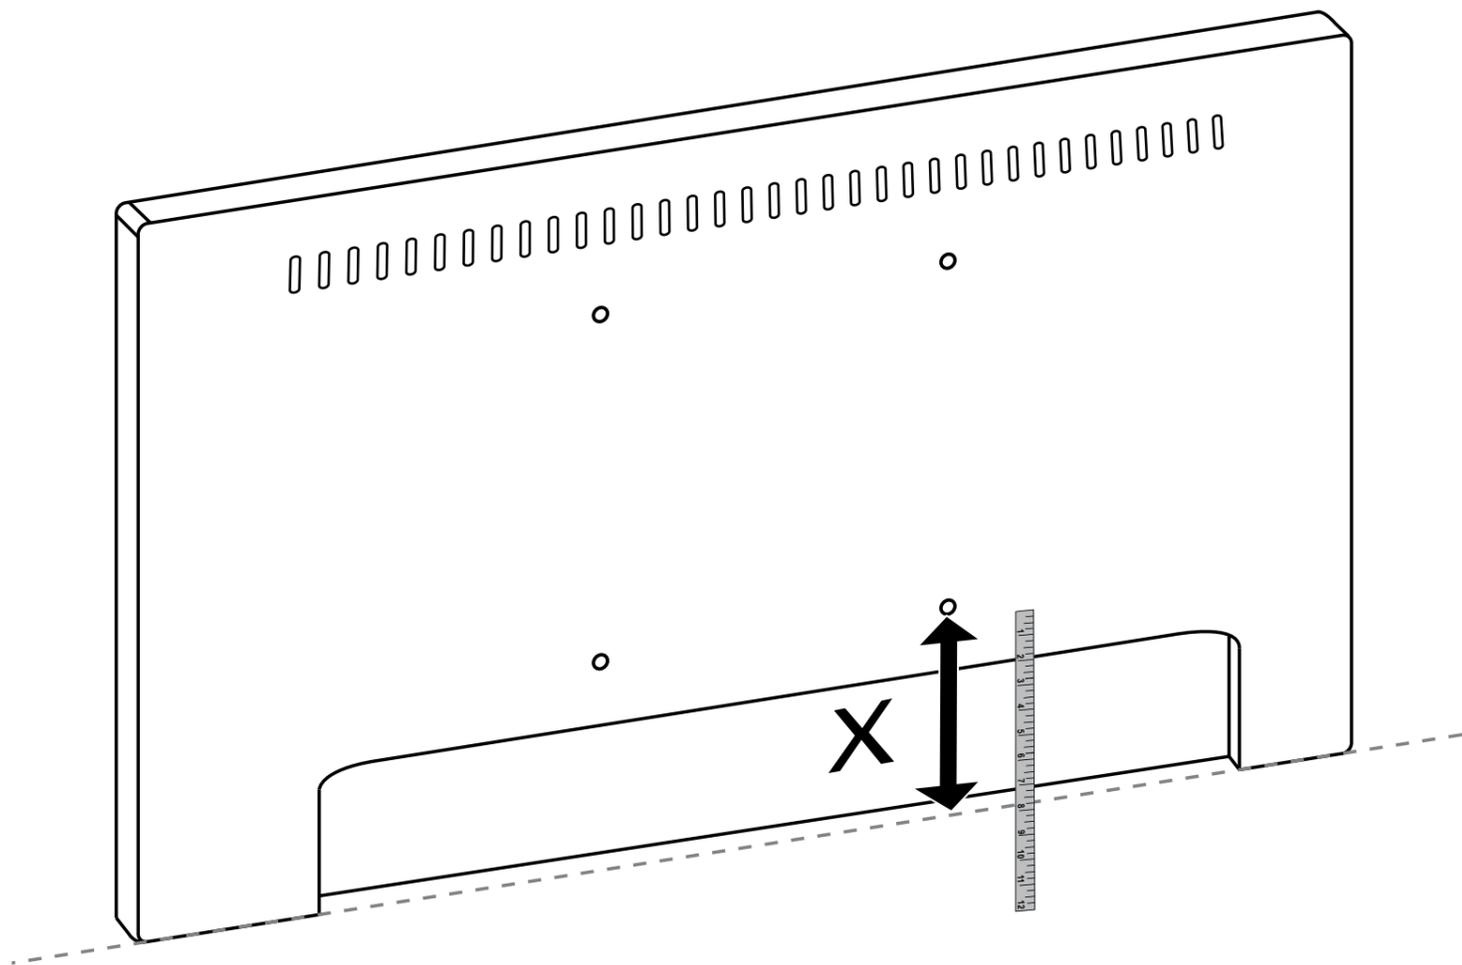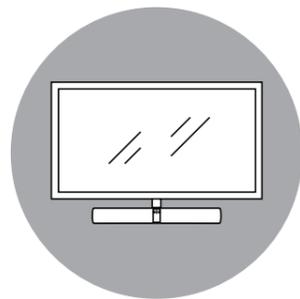




4

Assemble the Screen Mount and ensure that the distance illustrated is approx **X +10 cm or X +4 inches**.

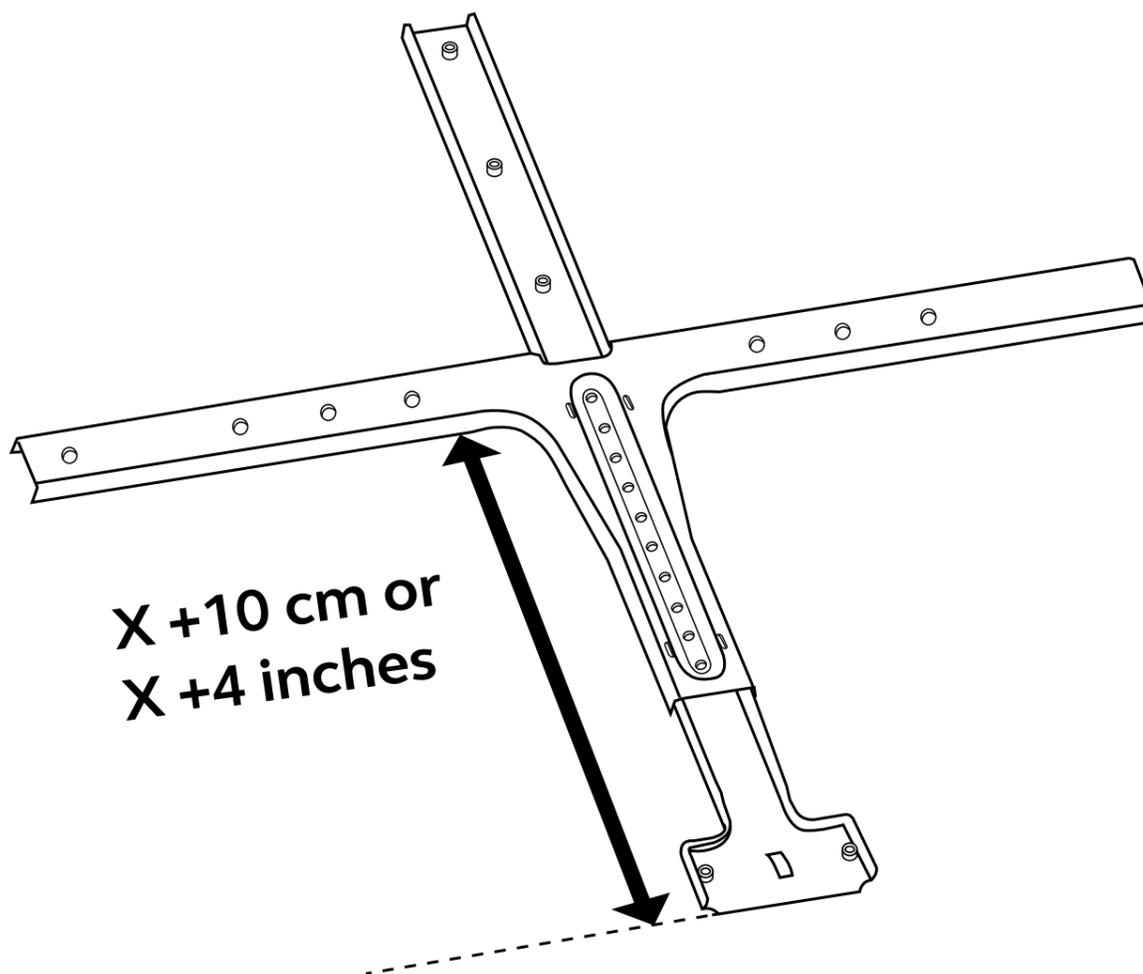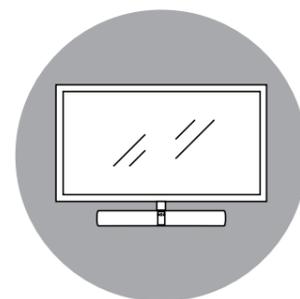



5

Screw the horizontal and vertical sections together using the supplied **M5x8 screws** and a **4 mm hex key**.

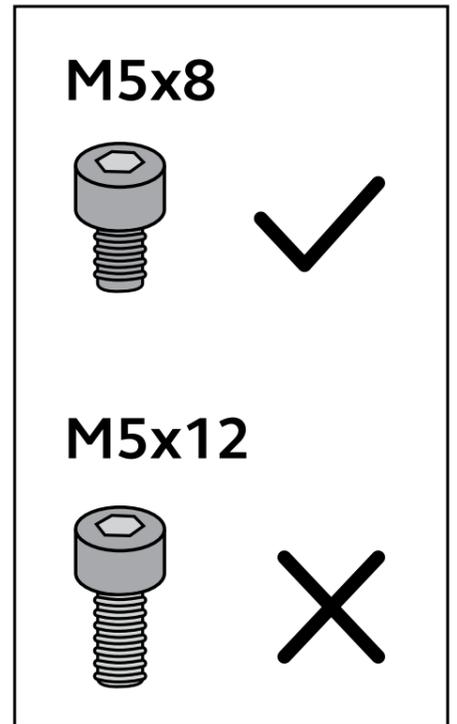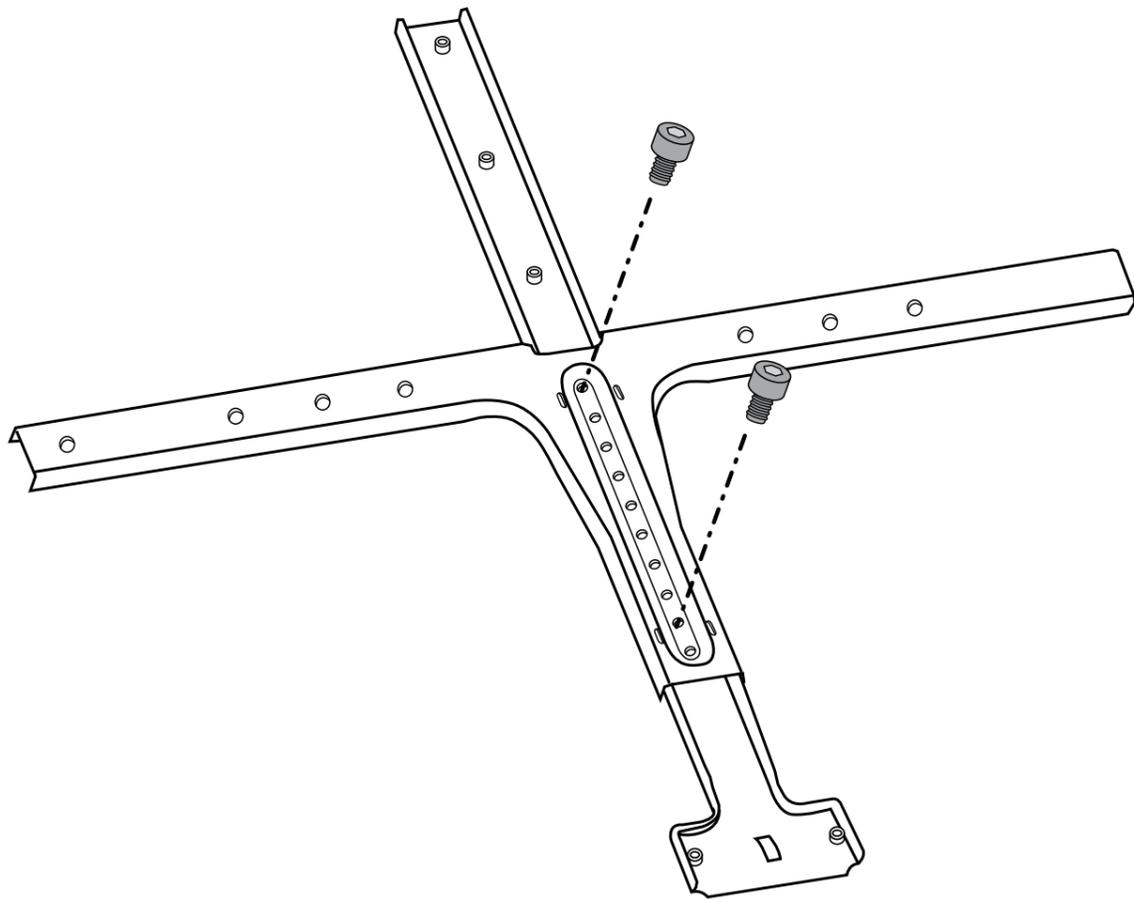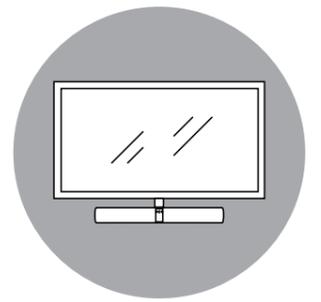







6

Stick the adhesive **protective pads** to the back of the Screen Mount.

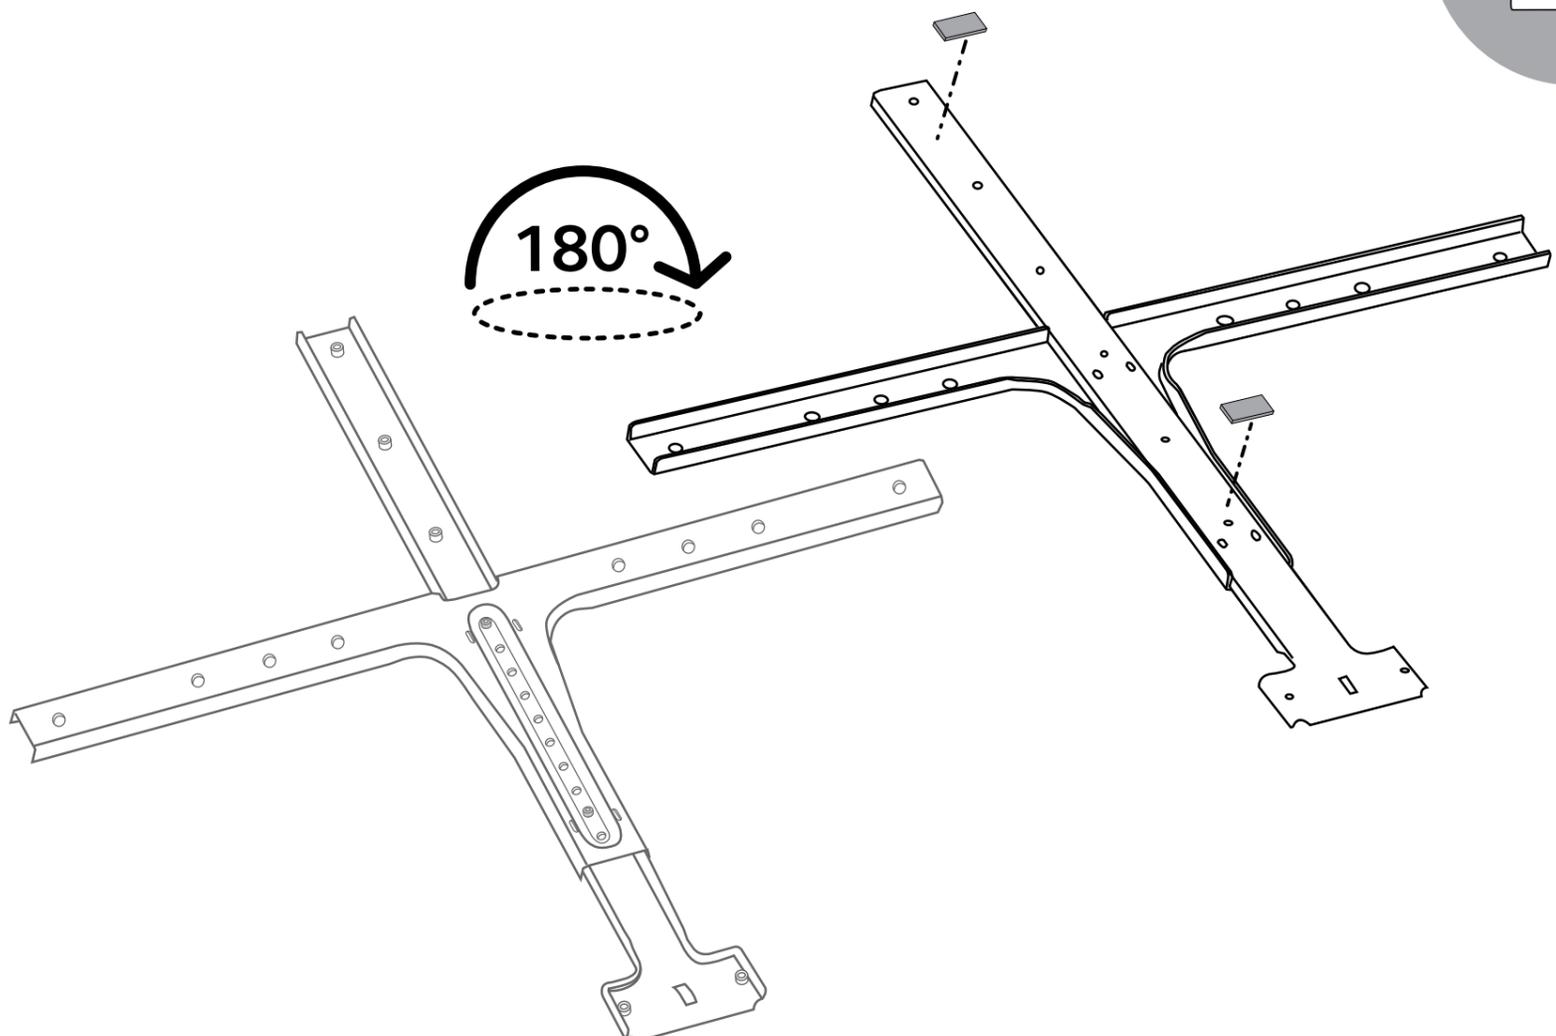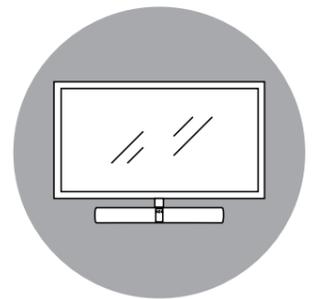



7

Select the screws, washers and spacers that best fit the contours of your screen.

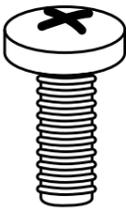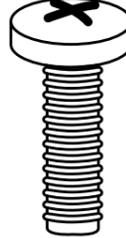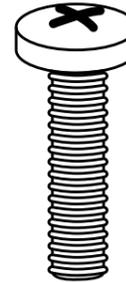Screws			Spacers				
							
M6x30 (4 pcs)	M6x40 (4 pcs)	M6x50 (4 pcs)	2 mm (2 pcs)	5 mm (4 pcs)	12 mm (2 pcs)	22 mm (4 pcs)	32 mm (4 pcs)
Screws			Washers				
							
M8x30 (4 pcs)	M8x40 (4 pcs)	M8x50 (4 pcs)	M6 (4 pcs)	M8 (4 pcs)			



8

Screw the Screen Mount and the VESA mount (not supplied) to the screen as illustrated, using the ideal spacer length for the uppermost screws.

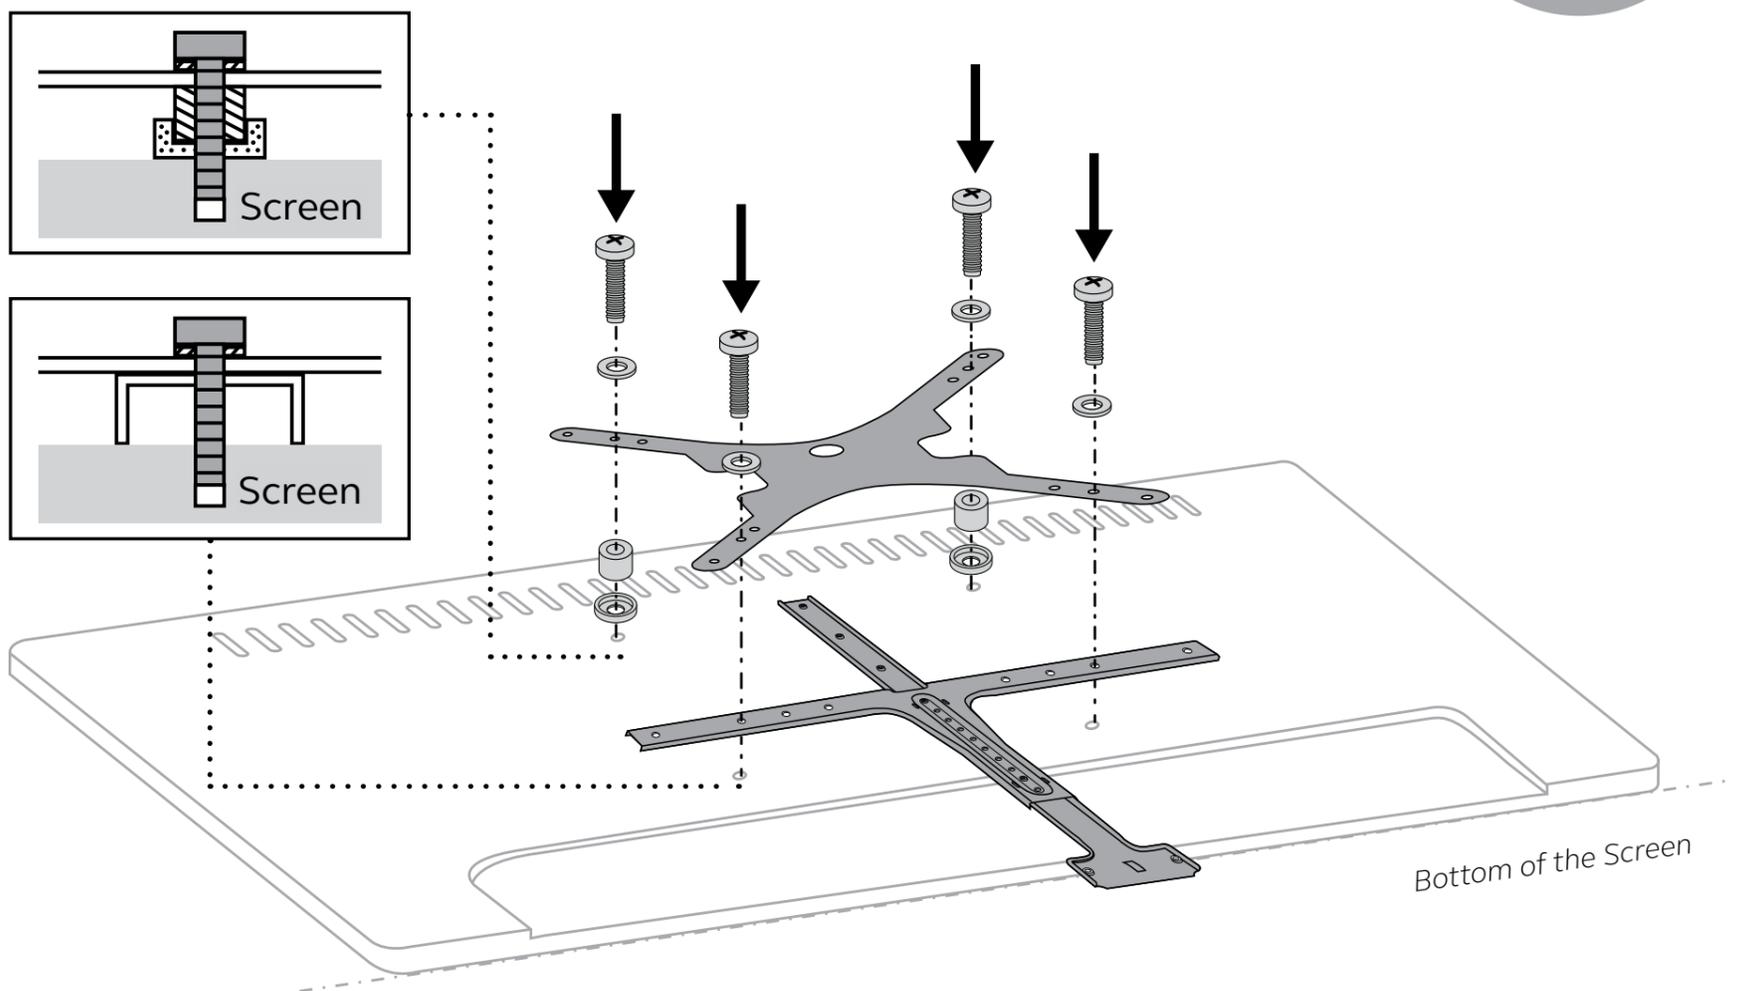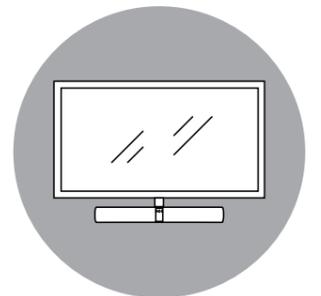



9

Tilt the hinge on the PanaCast 50 for easy access to the screw holes.

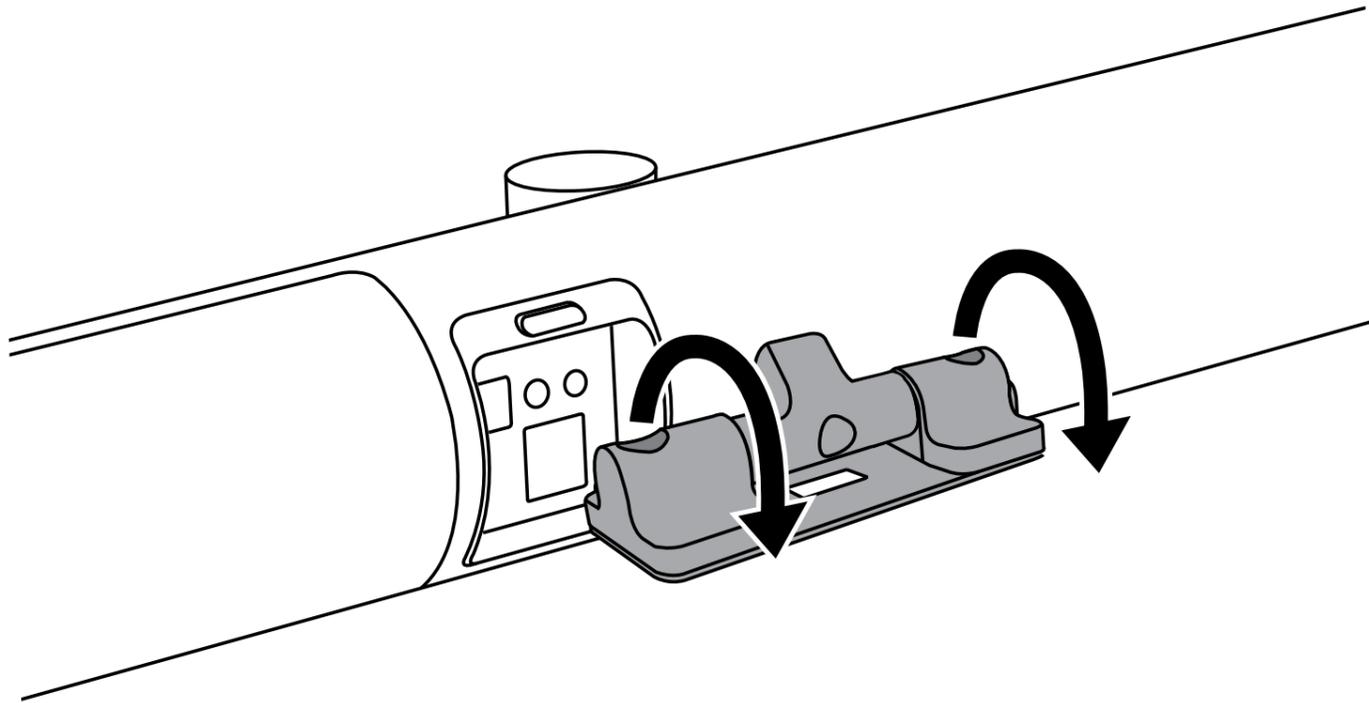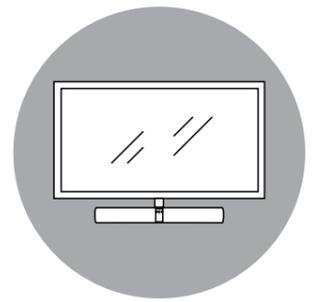




10

Mount the PanaCast 50 to the Screen Mount using the supplied **M5x12 screws** and a **4 mm hex key**.

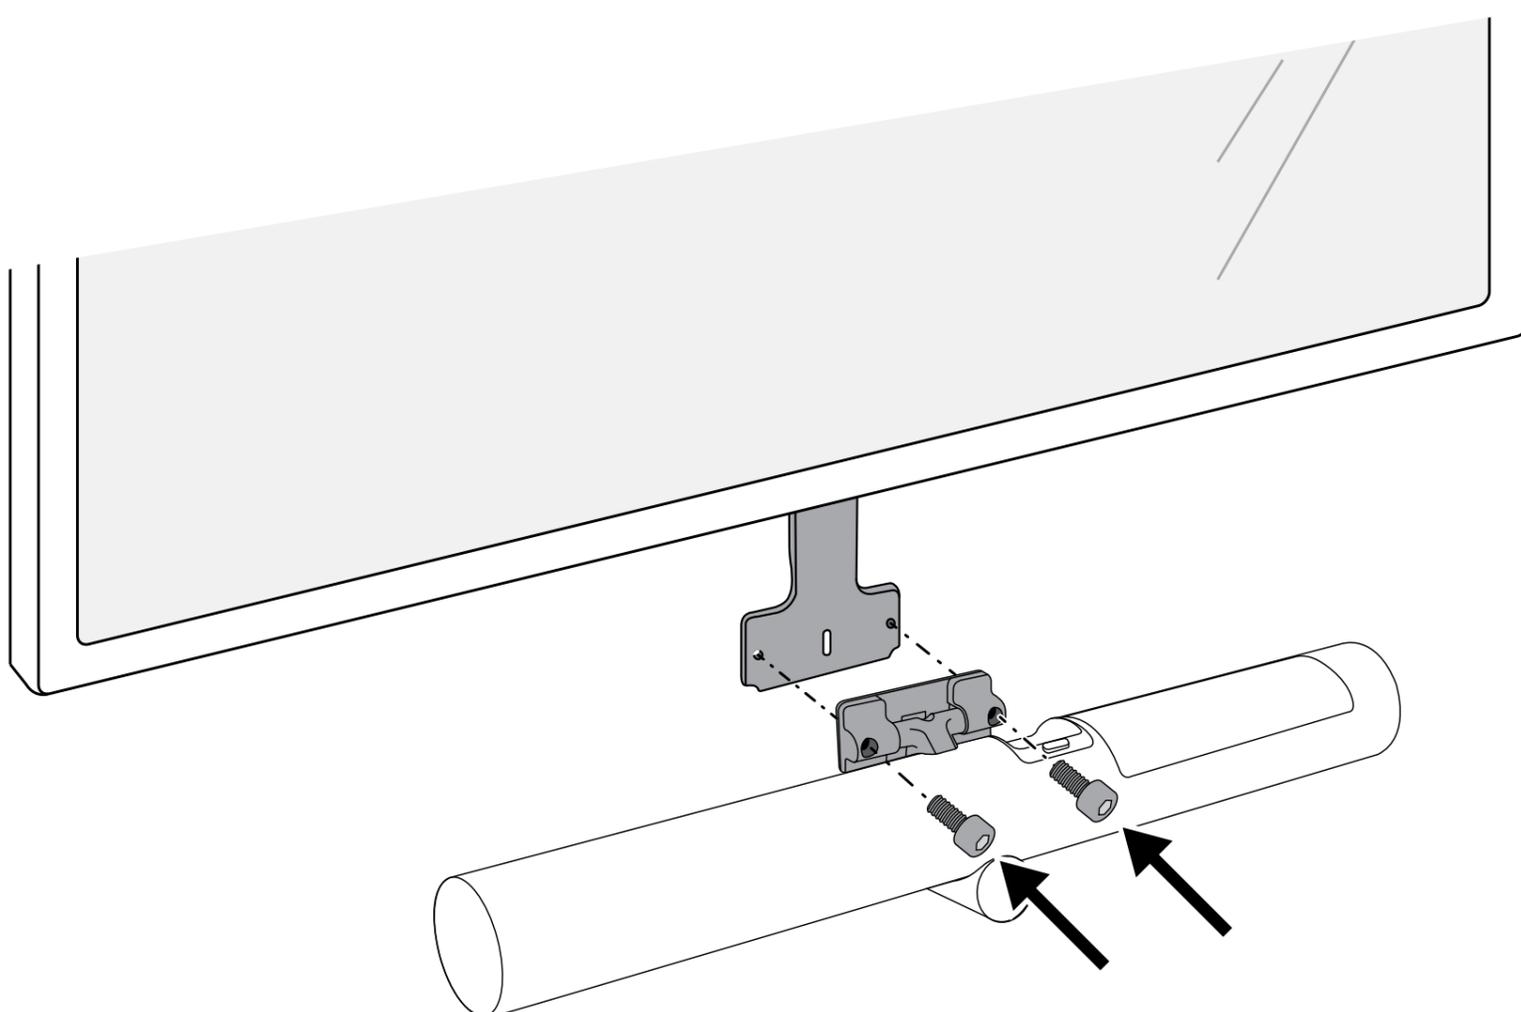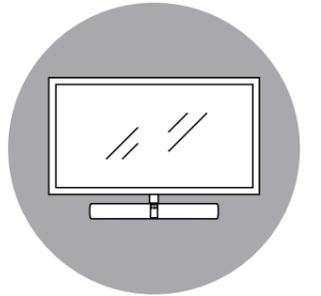



11

Rotate the PanaCast 50 into its final position and angle the camera to point at eye-level.

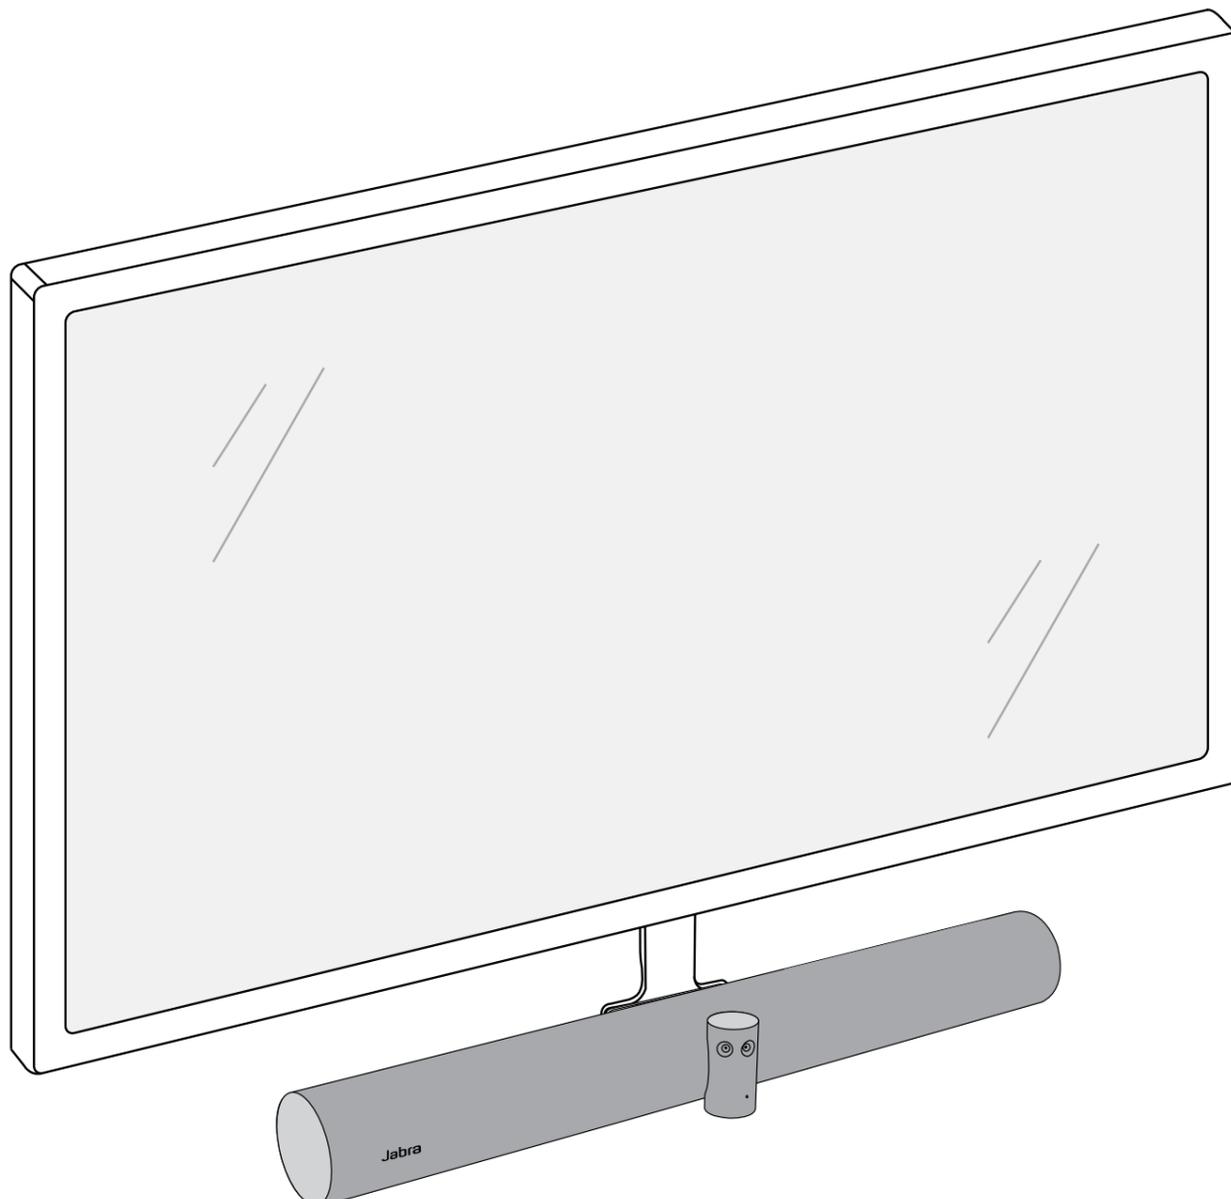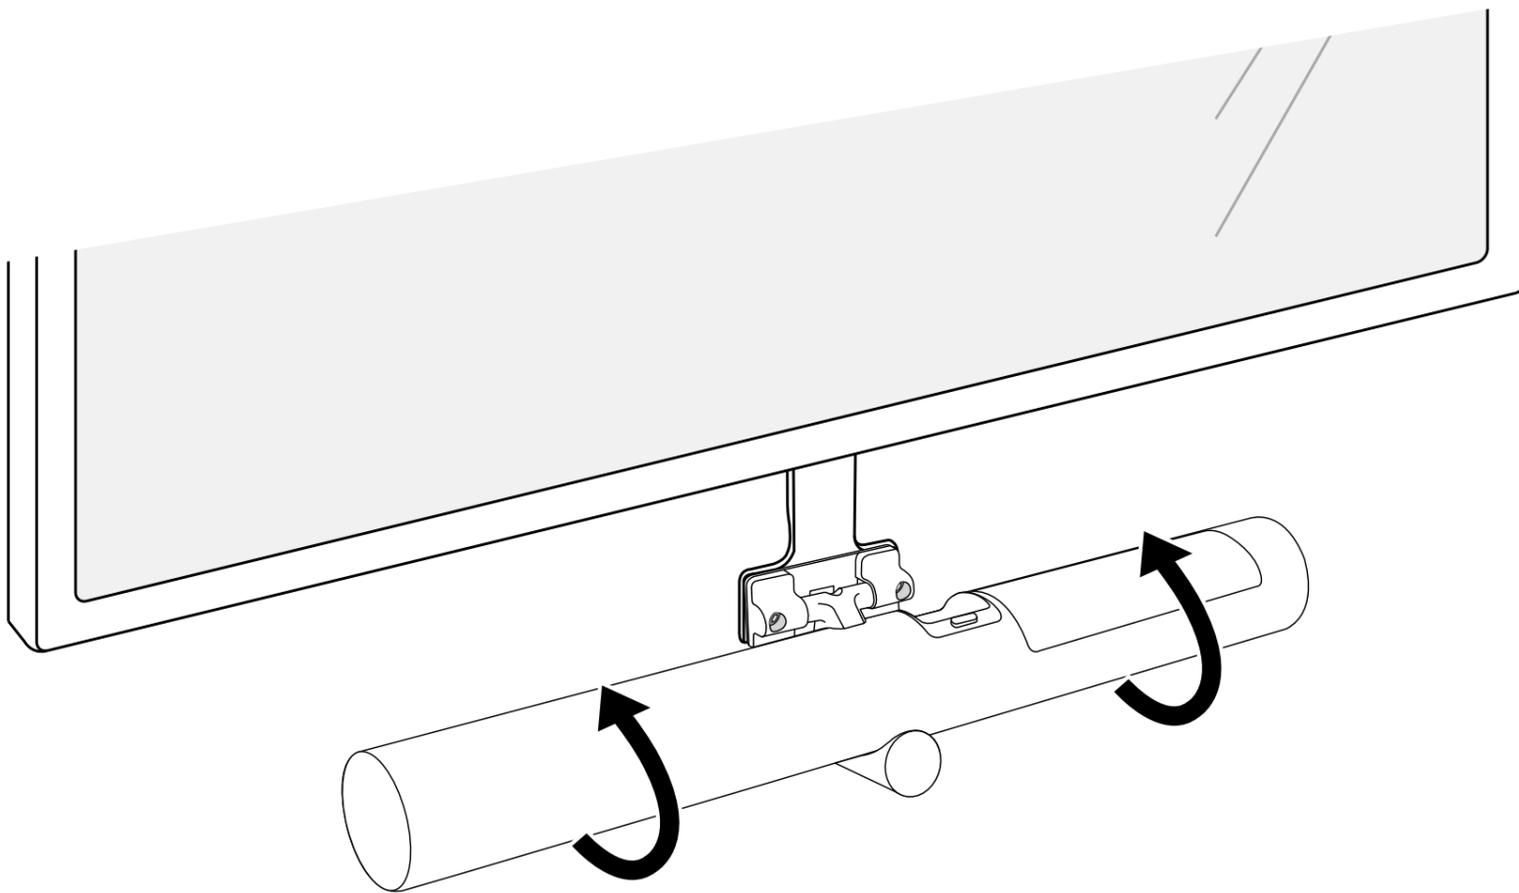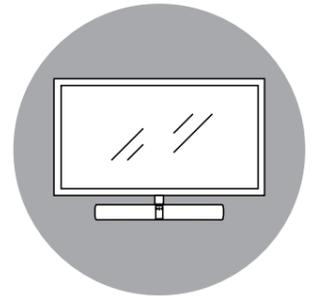


1

If the screen is already wall-mounted, remove it from the wall.

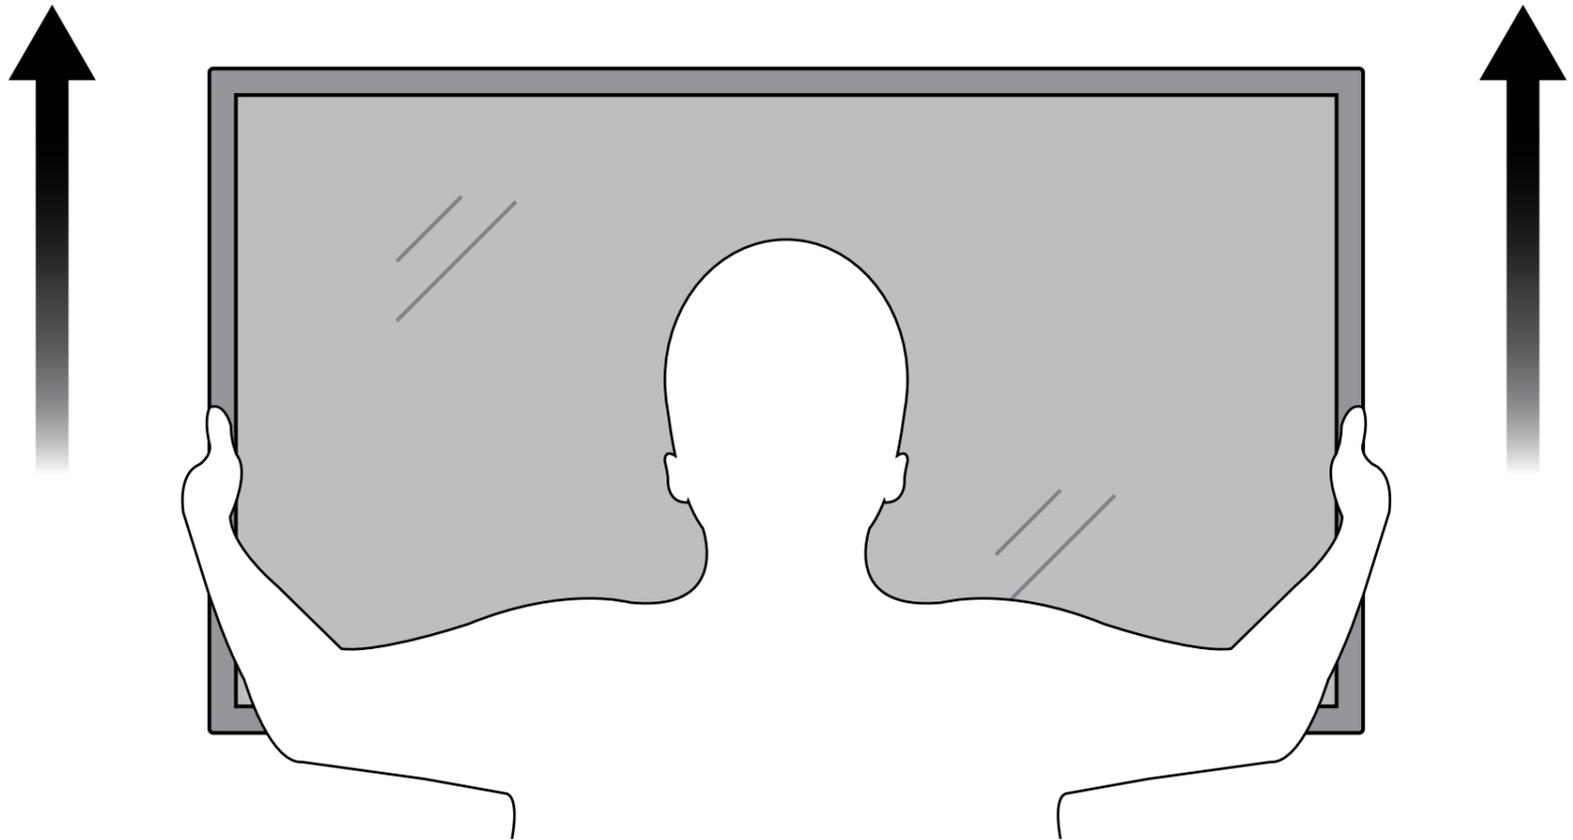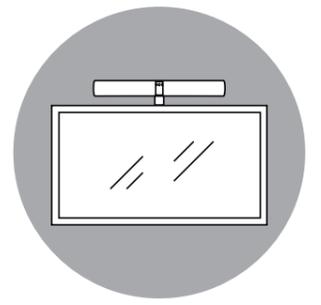



2

Detach the existing **VESA mount** from your screen.

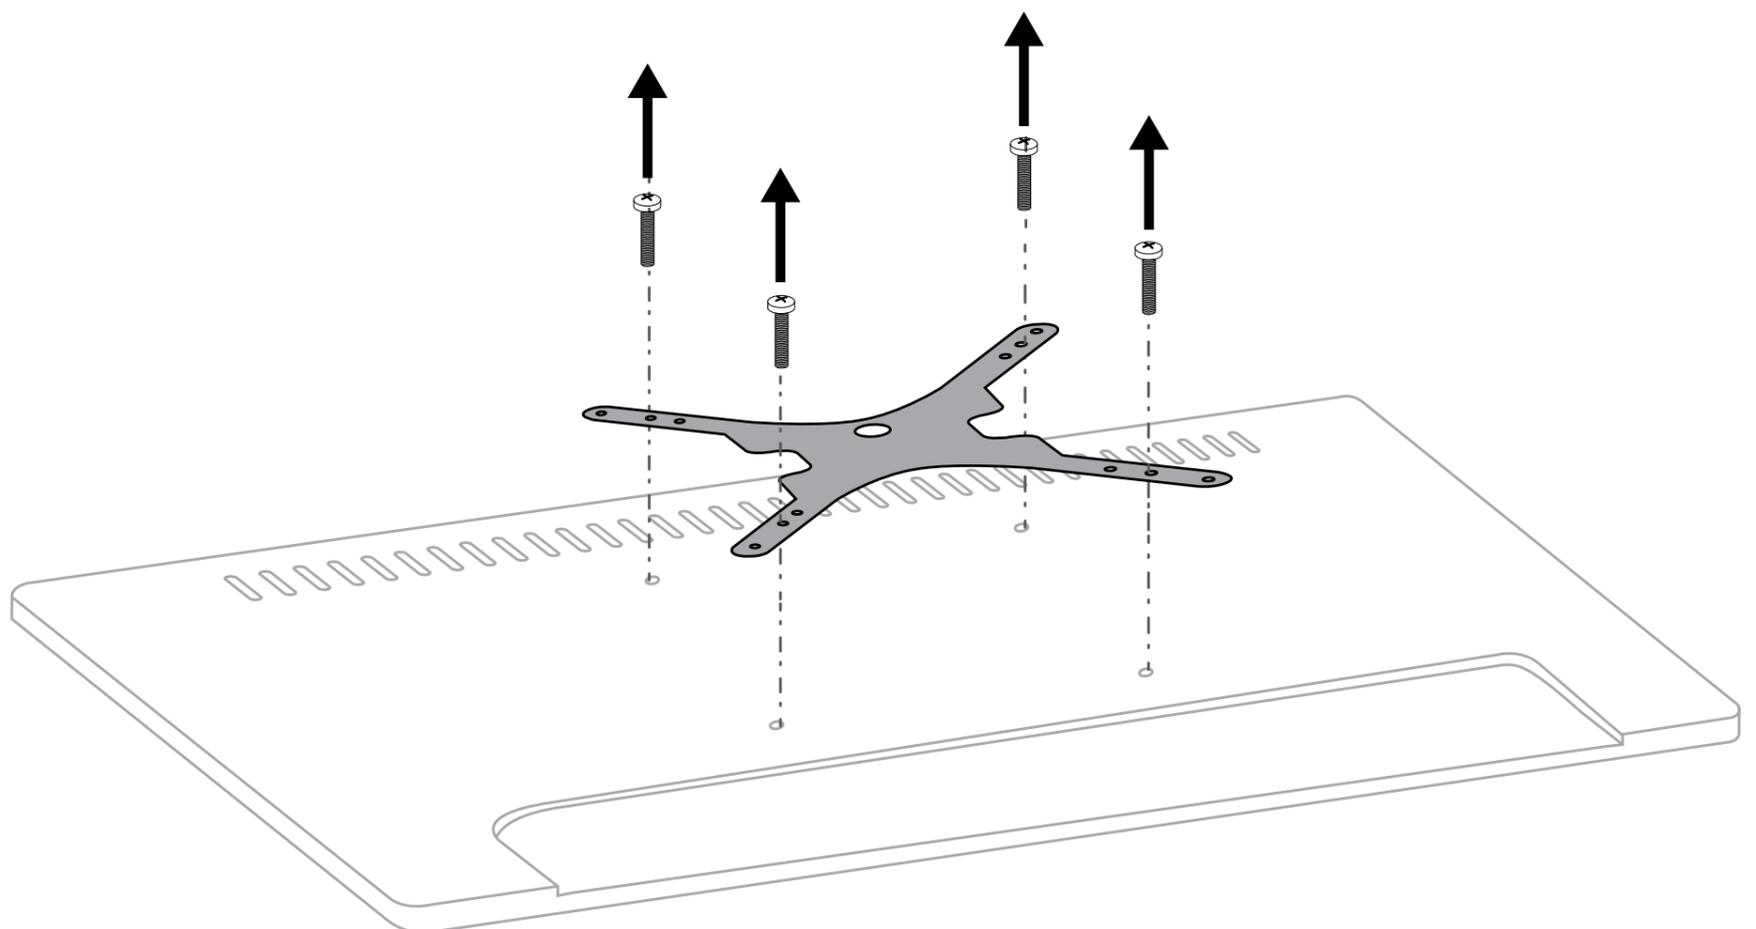



3

Measure the distance between the VESA mount hole and the top of the screen. This distance is **X**.

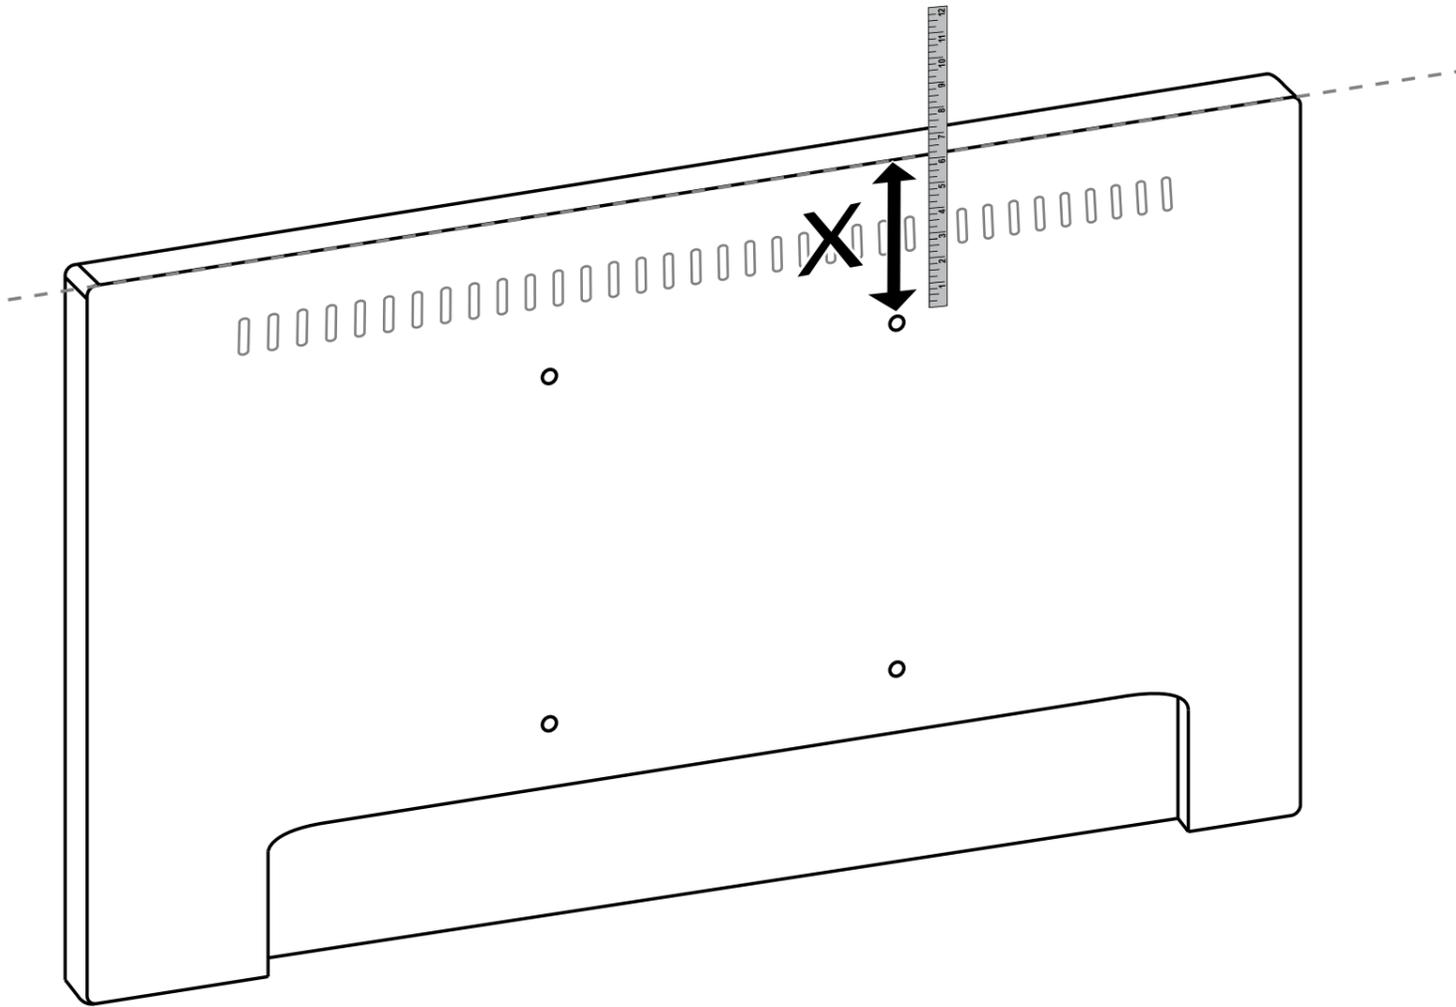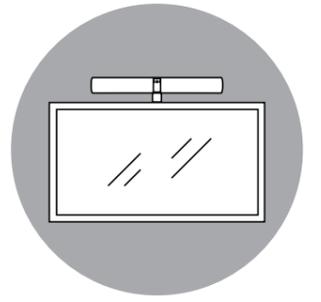




4

Assemble the Screen Mount and ensure that the distance illustrated is approx **X +10 cm or X +4 inches**.

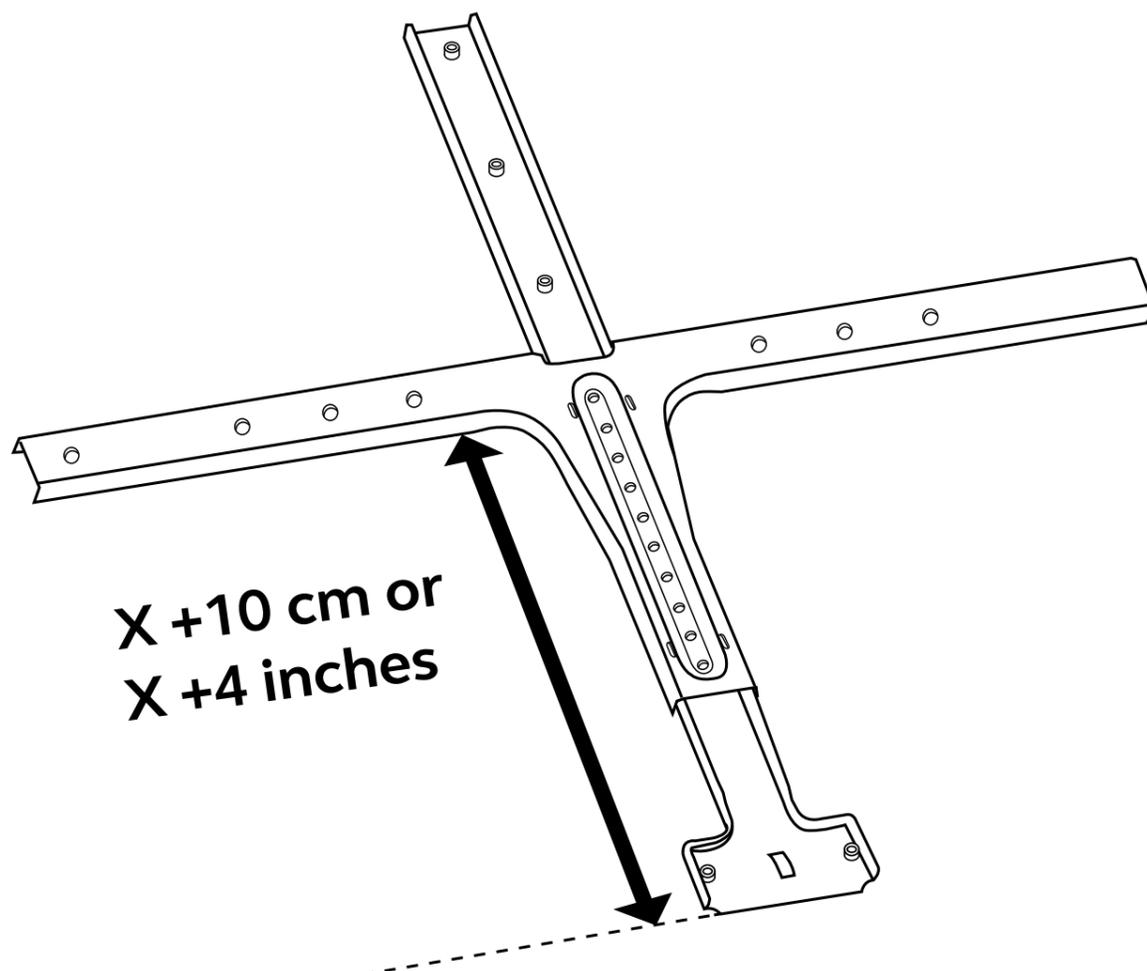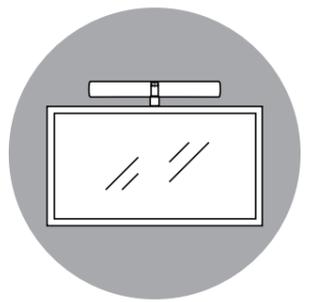



5

Screw the horizontal and vertical sections together using the supplied **M5x8 screws** and a **4 mm hex key**.

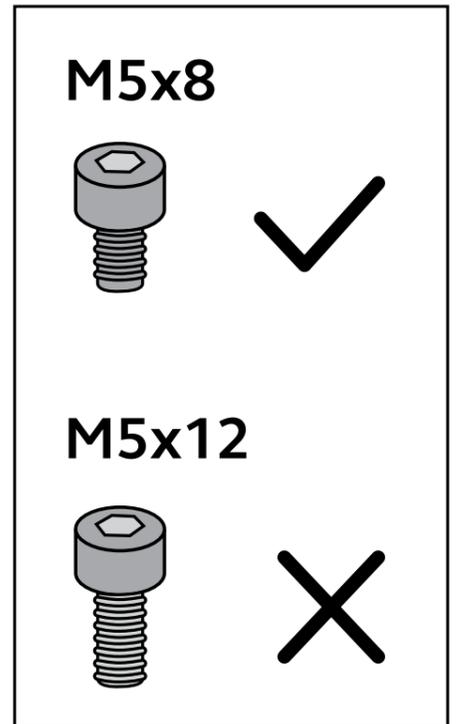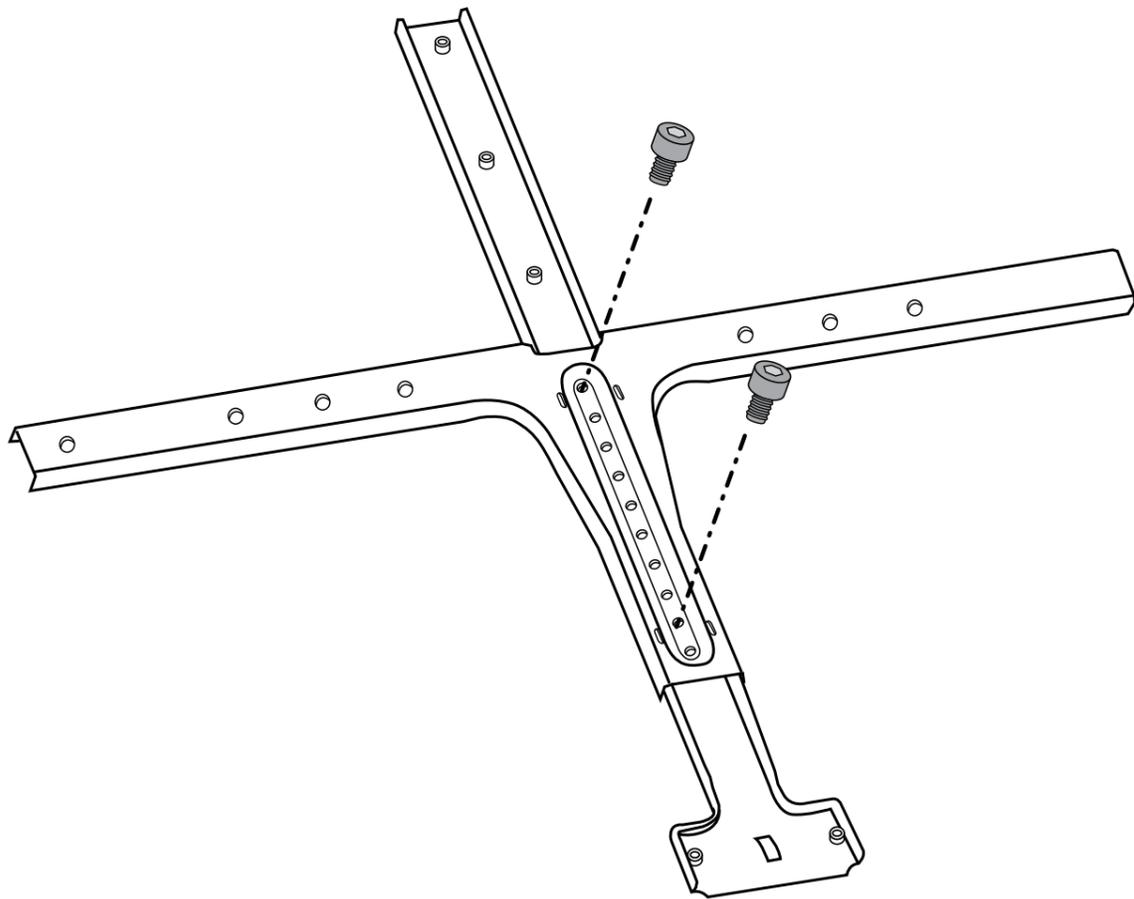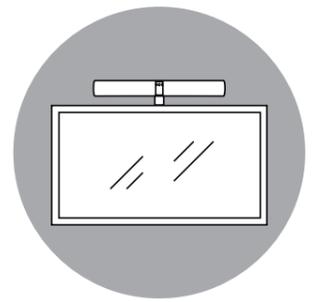







6

Stick the adhesive **protective pads** to the back of the Screen Mount.

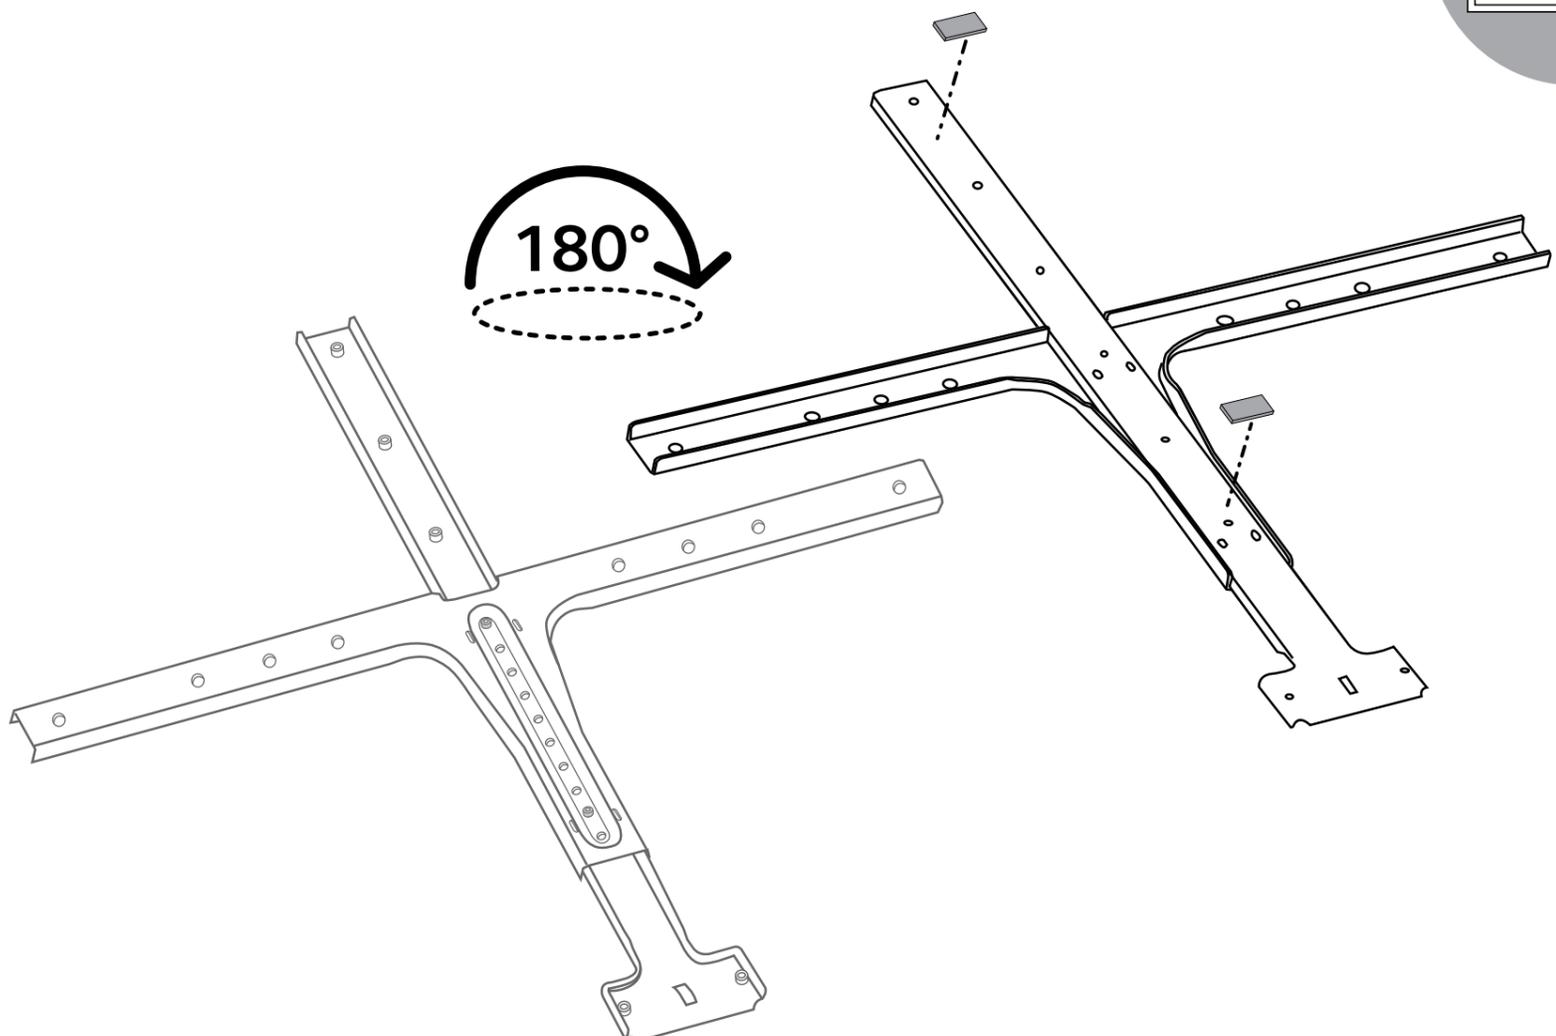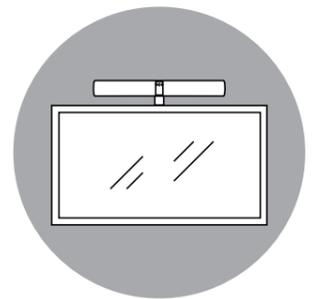



7

Select the screws, washers and spacers that best fit the contours of your screen.

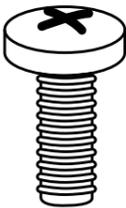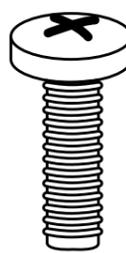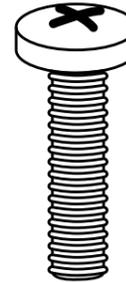Screws			Spacers				
							
M6x30 (4 pcs)	M6x40 (4 pcs)	M6x50 (4 pcs)	2 mm (2 pcs)	5 mm (4 pcs)	12 mm (2 pcs)	22 mm (4 pcs)	32 mm (4 pcs)
Screws			Washers				
							
M8x30 (4 pcs)	M8x40 (4 pcs)	M8x50 (4 pcs)	M6 (4 pcs)	M8 (4 pcs)			



8

Screw the Screen Mount and the VESA mount (not supplied) to the screen as illustrated, using the ideal spacer length for the uppermost screws.

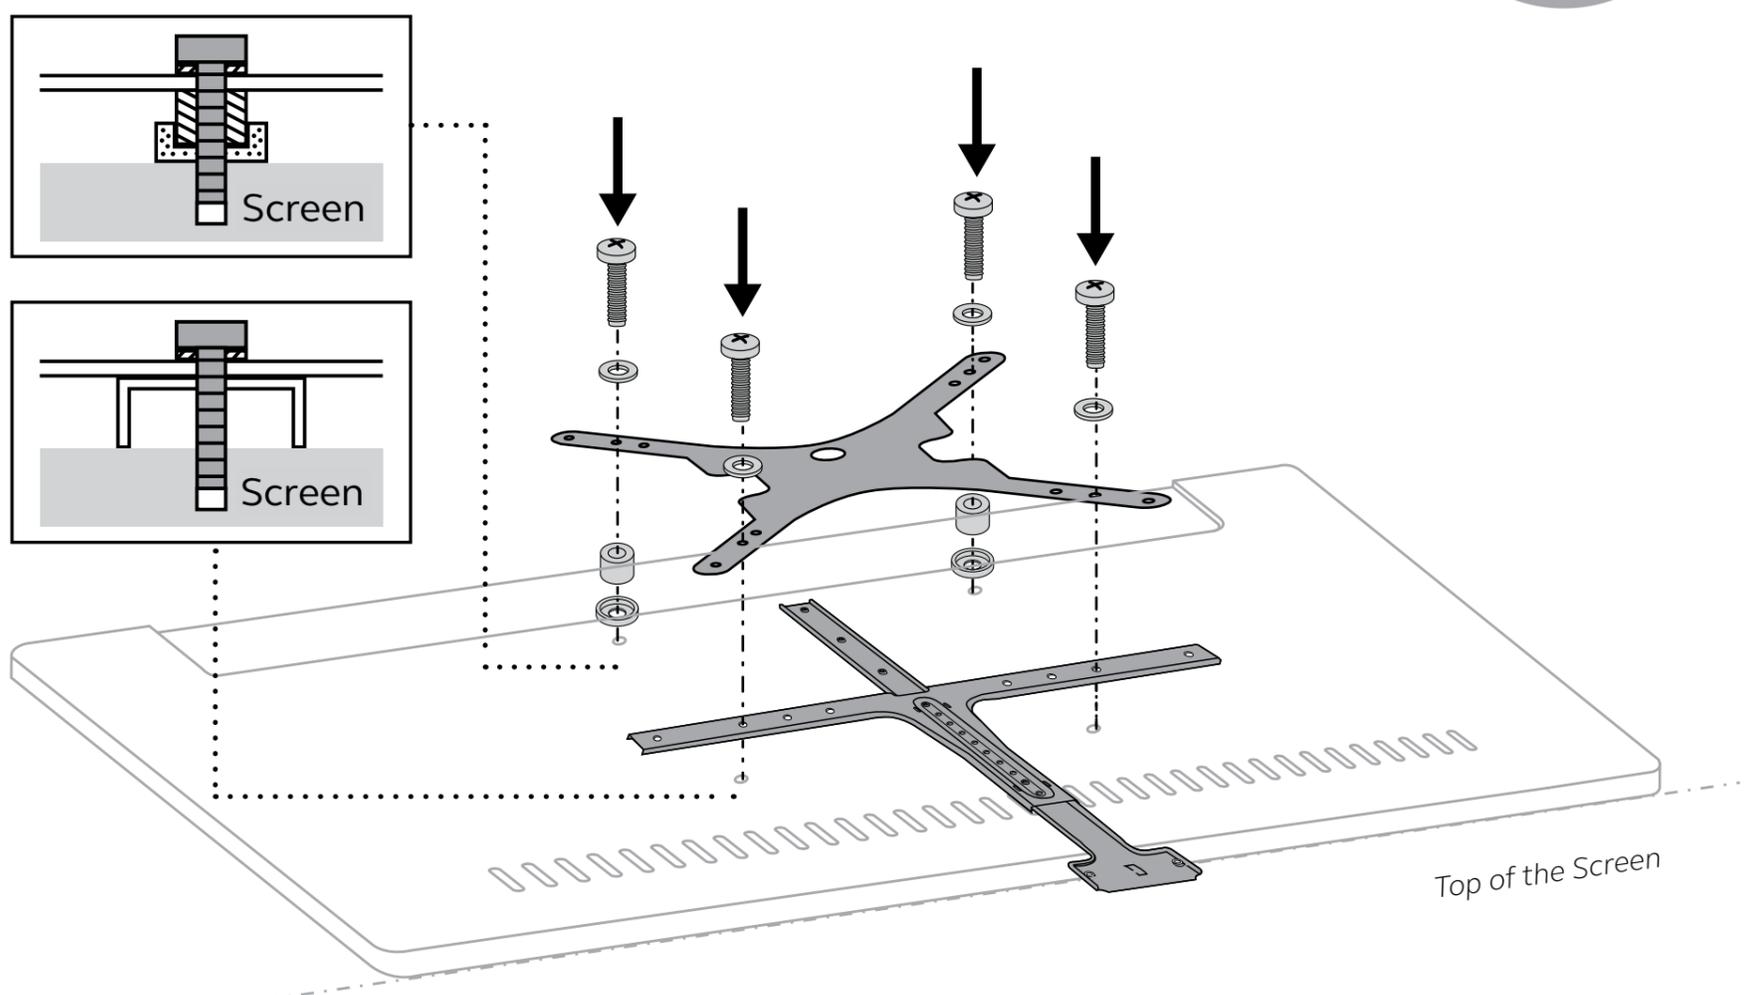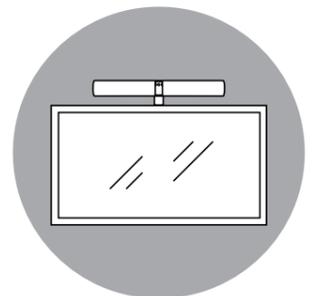



9

Tilt the hinge on the PanaCast 50 for easy access to the screw holes.

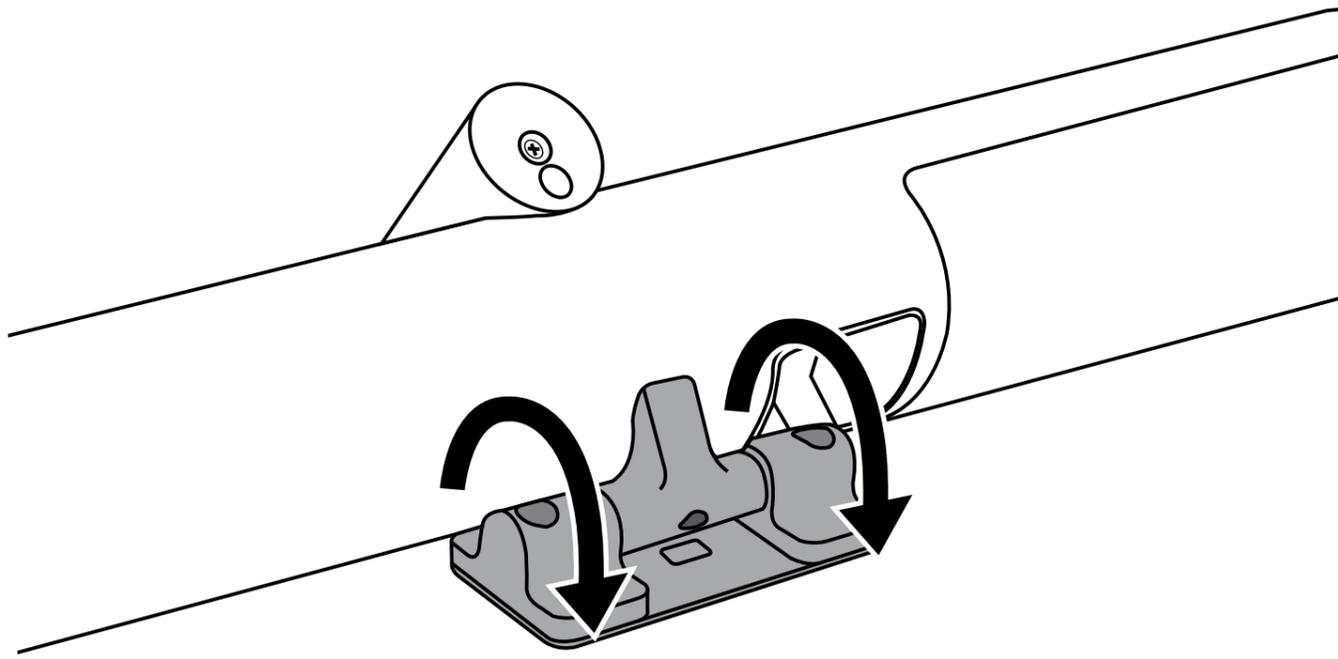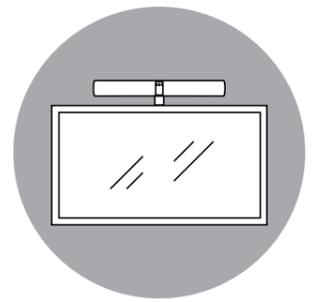

10

Mount the PanaCast 50 to the Screen Mount using the supplied **M5x12 screws** and a **4 mm hex key**.

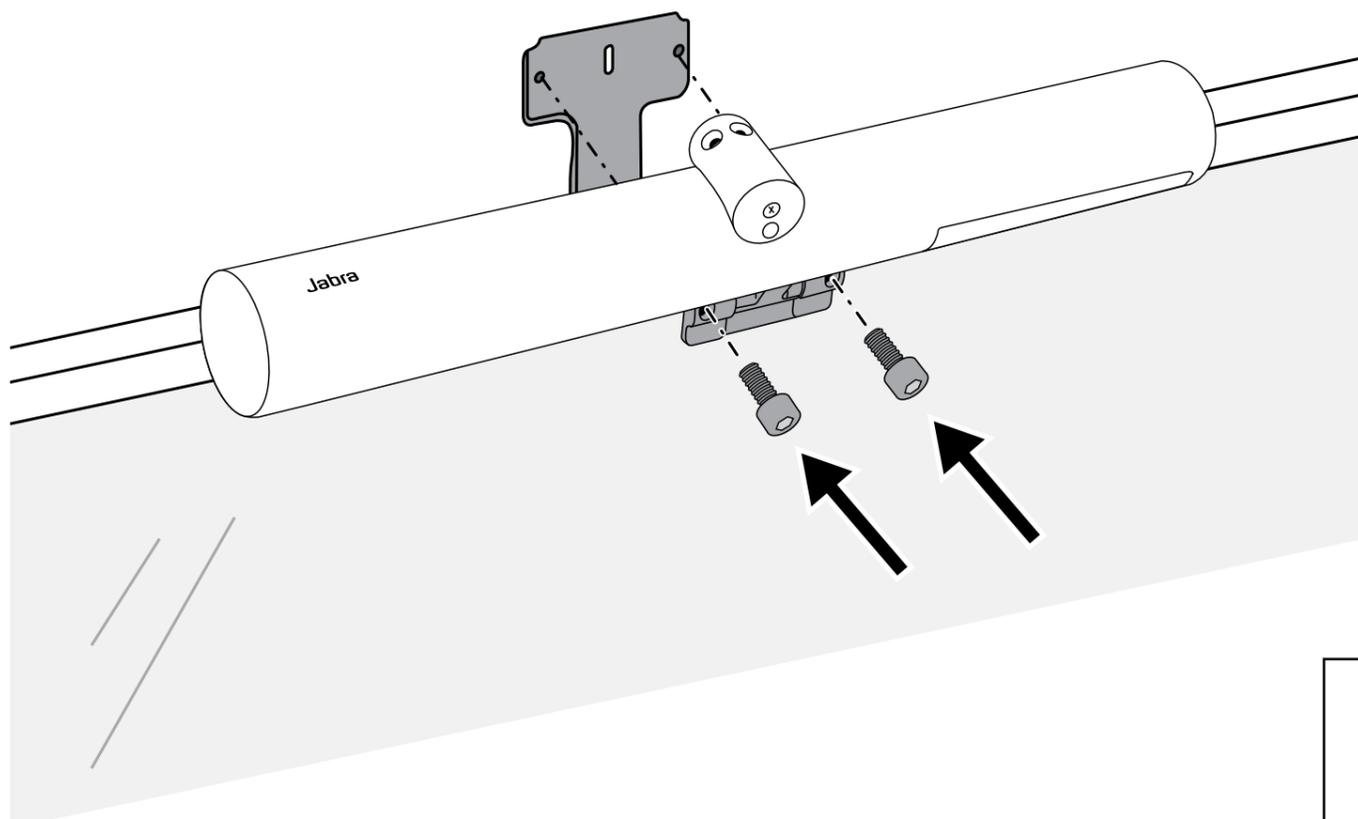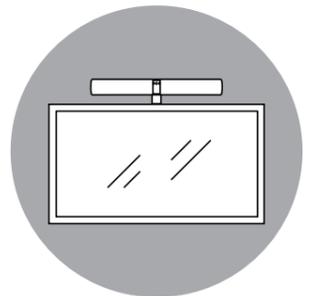

11

Rotate the PanaCast 50 into its final position and angle the camera to point at eye-level.

